

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE.

1. Read all instructions.
2. The connector comes with an O-ring. A missing O-ring could result in water/breast milk leakage.
3. The product has a built-in lithium battery. Do not use it in environments with strong static electricity or magnetic fields, nor should it be dried in a microwave oven or a disinfection cabinet, to avoid potential safety hazards.
4. This is not a toy. Please keep all parts out of the reach of children.
5. User repair or separation of the product is not permitted. Quality issues must be handled by the manufacturer, or its authorized service center, to avoid safety hazards.
6. Clean the product prior to each use.
7. Always use the product on a dry, flat surface away from water.

8. Do not place on or near a hot gas stove or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
9. The operating temperature range for this product is from around 50 °F to 90 °F (about 10 °C to 35 °C).
10. Do not operate the bottle warmer without a bottle containing water or breast milk. The bottle warmer will shut off automatically in the absence of such to prevent dry burning.
11. Do not move the appliance when in use.
12. To protect against electrical shock, do not immerse the power cord or plugs in water or other liquids.
13. Please charge the product only with a certified power adapter (5V 2A or 3A).
14. Unplug the power supply from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
15. When not in use, do not expose the product to direct sunlight, high temperatures, or disinfectants, as doing so may affect product performance.
16. Regularly check and remove debris from the charging port to avoid dust build-up and charging problems.
17. Fully charge the appliance before its first use.

18. Unplug the product when the battery is fully charged to avoid fire hazards.

19. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacity, or by persons lacking the requisite experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

20. Do not use the appliance for anything other than its intended use.

SAVE THESE INSTRUCTIONS

PARTS LIST

User manual * 1

Bottle warmer * 1

Lid * 1

USB Type-C charging cable * 1

Cleaning brush * 1

Connector * 5