
IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

1. To protect against risk of electric shock, do not place cord, plug, or motor drive assembly of appliance in water or any other liquid.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
3. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
4. Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away during operation to reduce the risk of injury and/or damage to the appliance.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
6. The use of attachments not recommended by Cuisinart may cause fire, electric shock, or risk of injury.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Keep hands and utensils out of freezer bowl while in use to reduce the risk of injury to persons or to the appliance itself. **DO NOT USE SHARP OBJECTS OR UTENSILS INSIDE THE FREEZER BOWL!** Sharp objects will scratch and damage the inside of the freezer bowl. A rubber spatula or wooden spoon may be used when the appliance is in the OFF position.
10. This appliance is for household use. Any servicing other than cleaning and user maintenance should be done only by authorised Cuisinart repair personnel.
11. Do not use the freezer bowl over flames, hot plates, or stoves. Do not expose to heat source. Do not wash in dishwasher; doing so may cause a risk of fire, electric shock, or injury.

12. Do not operate your appliance in an appliance garage, or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
13. Remove mixing paddle from ice cream maker before washing. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Do not use appliance for other than its intended use.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or animals, or tripped over.

CAUTION

- Do not immerse motor drive assembly in water.
- To reduce the risk of fire or electric shock, do not disassemble the motor drive assembly. Note: The motor drive assembly does not contain any user-serviceable parts.
- Repairs should be made only by authorised personnel.
- Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage.
- Never clean with scouring powders or hard implements.

TABLE OF CONTENTS

Important Safeguards.	3
Features and Benefits	4
Before Using for the First Time	4
Freezing Time and Bowl Preparation.	5
Making Frozen Desserts.	5
Adding Ingredients.	5
Safety Feature	5
Cleaning, Storage and Maintenance.	5
Warranty	6

FEATURES AND BENEFITS

- 1. Ingredient Spout**
Pour recipe ingredients through the spout. Also use to add ingredients like chips or nuts, without interrupting the freezing cycle.
- 2. Easy-Lock Lid**
Transparent to let you watch the freezing process as it progresses. Lid is designed to easily lock to the base.
- 3. Mixing Paddle**
Mixes and aerates ingredients in freezer bowl to create frozen desserts or drinks.
- 4. Freezer Bowl**
Contains cooling liquid between a double-insulated wall to create fast and even freezing. Double wall keeps the bowl cool and at an even temperature.
- 5. Base**
Contains heavy-duty motor strong enough to handle ice cream, frozen yogurt, sherbet, sorbet, and frozen drinks.
- 6. On/Off Switch**
- 7. Rubber Feet**
(not shown)
Non-slip feet keep base stationary during use.
- 8. Cord Storage** (not shown)
Unused cord is easily pushed into the base to keep counters neat and safe.
- 9. BPA-Free** (not shown)
All materials that come in contact with food are BPA-free.

BEFORE USING FOR THE FIRST TIME

DO NOT immerse the motor base in water. Wipe it with a moist cloth. Wash the lid, freezer bowl and mixing arm in warm soapy water to remove any dust or residue from the manufacturing and shipping process. DO NOT clean any of the parts with abrasive cleaners or hard implements.

