


Rowenta®

X-PLOER

SERIE 575 MAX

SERIE 580 MAX

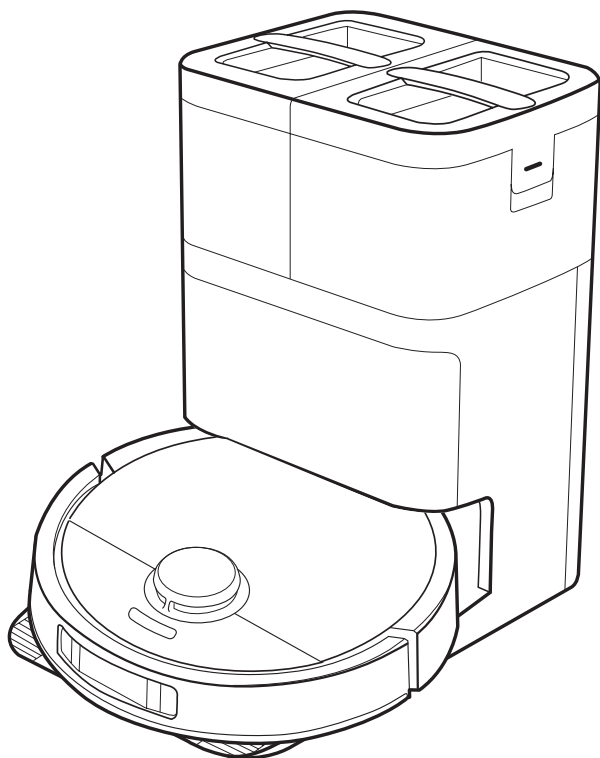

User's guide

EN User's guide

SL Uporabniški priročnik

p. 03

p. 22

1. What's in the box?

2. Product overview

3. Before use

4. Install the robot

5. Connect the robot to the free app

6. Use the robot without the app

7. Maintain the robot

8. Component replacement frequency

9. Store the robot when you don't use it

10. Do's and don'ts

11. Unpair the robot et delete personal data

12. Common issues and solutions

p. 04

p. 04

p. 05

p. 05

p. 08

p. 08

p. 09

p. 16

p. 17


p. 17

p. 17

p. 18


Please read carefully the "Safety and use instructions" booklet before first use.

For more information:
www.rowenta.com

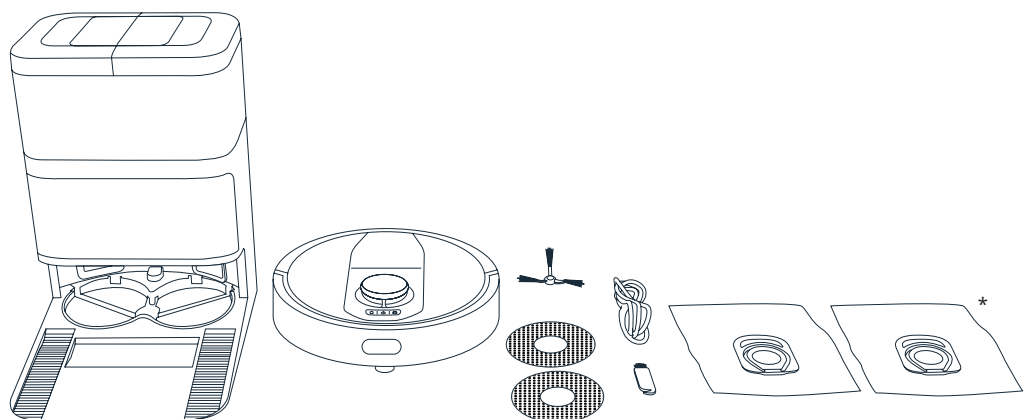

*depending on model

2. Product overview

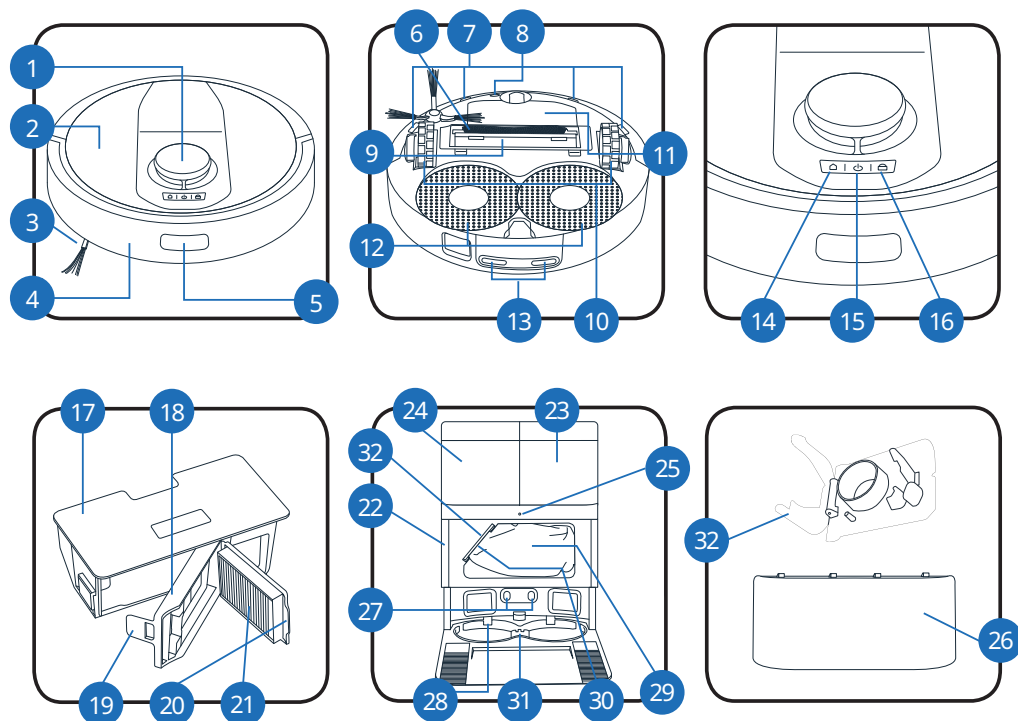

2. Product overview

1. LIDAR
2. Flip cover
3. Side brush
4. Bumper
5. Obstacle sensor
6. Main brush
7. Anti-drop sensors
8. Ultrasonic carpet sensor
9. Main brush cover
10. Wheel
11. Battery
12. Spinning mops with magnetic holders
13. Charging contacts
14. Home button
 - Press to return to station
15. ON-OFF button (Power, Start, Pause)
 - Press and hold to turn on or off
 - Press to start or pause cleaning
16. Child Lock button
 - Press and hold 3 seconds to enable / disable child lock (buttons are locked to prevent accidental button presses)
17. Dust box
18. Dust box opening
19. Dust box latch
20. Filter frame
21. Filter
22. All-in-one station
23. Clean water tank
24. Waste water tank
25. Status indicator light
 - Light off: powered off
 - White blinking: station in operation
 - Red blinking: tank(s) removed/bag not installed/error
 - White light on: normal status
26. Dust bag compartment cover
27. Charging contacts
28. Auto mop washing tray
29. Hygiene+ dust bag
30. Hygiene+ dust bag handle
31. Filtration grid
32. Hygiene + bag adapter

3. Before use



Although the robot is able to autonomously avoid some obstacles, please read the following tips to improve cleaning efficiency.

Tidy up cables, cords, small and loose items. Remove any unstable, fragile, precious or dangerous items from the ground. Make sure each room door is open. Your robot may encounter some difficulties on dark floors and on carpets: with fringes, too thick, with long piles, too light (ex: bathroom carpet). For optimum anti-drop sensors efficiency, remove any item (ex: shoe) from the stairs. When using the robot in a raised area, place

a physical barrier at the edge of a drop to prevent accidental falls. Do not stand in narrow spaces, such as hallways so the robot is not blocked.



Direct exposure to sunlight or heavy light contrasts can affect the robot's sensors. The robot can have an abnormal behaviour or can cease operation. Please move the robot to a new location and start it again. For optimal performance, it is recommended to fully charge the robot before first use. To ease the exploration step, when the robot creates the map, you can place physical barriers.

4. Install the robot




Flash the QR-code to know how to install and connect the robot in video. Read the instructions for more detailed informations.


<https://www.youtube.com/playlist?list=PL9XhN3pCkFOb601vKAz3EqxIHUBVgXNXw>

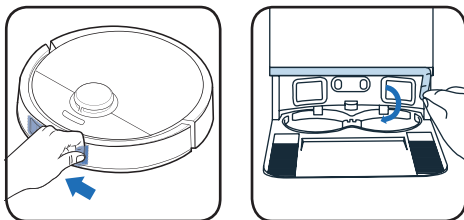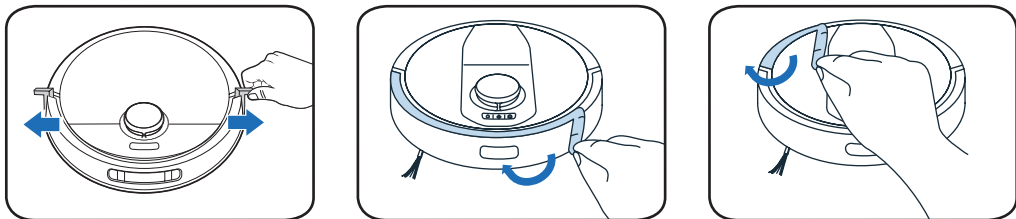**Remove protections**


Remove all protections on the station and on the robot.

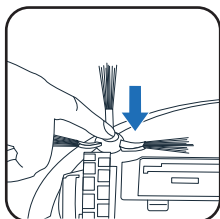**Install the side brush and the mops**


Reverse the robot, install the side brush by gently clipping it. The side brush is correctly installed when you hear a click sound.

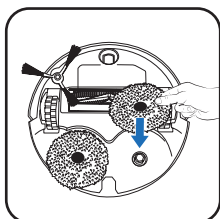



Install the two mops in the two magnetic holders. The mops are correctly installed when you hear a click sound.

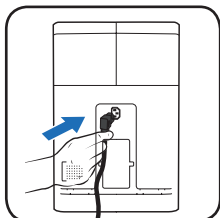**Install the station and plug it**


Take the power cable and insert the connector into the power port behind the station. You can keep the cable tidy behind the station.

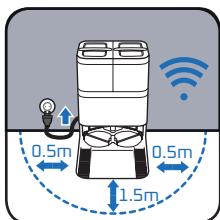

Install the station on a hard and flat floor. Avoid parquet, wooden floors and carpet. Place the station in a clear space against a wall, with no stairs in front of the station. Keep at least 0.5 m of clearance on either side and 1.5 m in front. Make sure the chosen location is close to the Wi-Fi box or has good Wi-Fi signal strength. Keep the area around the station clear from any object, reflective surface, mirror, table and chair. Keep the station away from direct sunlight. Plug the power cable to a power socket. Make sure the power cable remains tidy behind the station and against the wall.

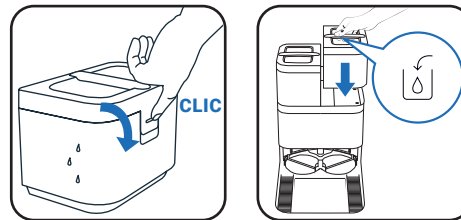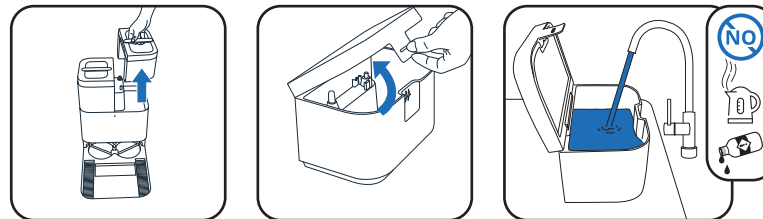**Add water in the clean water tank**

Pull out the clean water tank. Open the lid and add water up to the maximum water level mark. Do not exceed the MAX level. Do not add hot water to the water tank, as it may deform the tank. Do not add any substance like clearing agents, essential oils, detergent or "Clean it" cleaning solution other than clean water to prevent damaging the station and the robot. Close the lid. The lid is correctly closed when you hear a click sound. Re-install the clean water tank in its original position in the station.

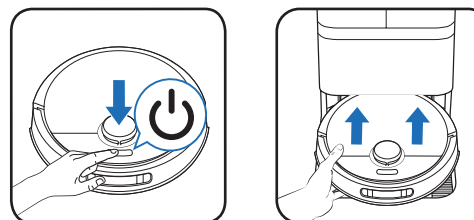**Turn on the robot**

Turn the robot on by pressing and holding the ON-OFF button for few seconds until the robot lights turn on. You will hear a beep sound.

Place the robot onto the station

Once the robot is on, place it onto the station. Make sure the charging contacts on the robot and the station are fully aligned. When the robot is correctly installed, you will hear a beep sound. If the indicator light is blinking white, the battery is not fully charged. We recommend to wait for the robot to be fully charged. For optimal performance, it is recommended to fully charge the robot before first use. The indicator light turns into steady white when the battery is fully charged. For the first-time cleaning, please ensure that the robot is fully charged.

Informations

Please note that the robot will automatically turn on when placed in the station. The robot cannot be turned off when charging. Please note that for the first cleaning in a new environment, the robot will create the home map. Do not lift the robot during the first cleaning, it interrupts the map creation. Please make sure that mops are correctly installed before starting a cleaning session. Do not remove mops during cleaning. If you have carpets with fringes, please place barriers around carpets to prevent the robot from getting stuck in the fringes, it prevents the map creation. If you have an outdoor area (garden, balcony, patio, etc.) accessible with a threshold less than 2 cm high or without threshold (for example with a French window, a patio door, a bay window, etc.), please close this access so the robot doesn't go outside your home.



On your smartphone, open the Google Play Store (Android) or App Store (iOS). Search for "Rowenta Robots" or scan the QR-Code and install the application. Open the app and follow the on-screen instructions to connect your robot.


<https://rowentarobots.smart.link/21xzb2xli>



You can also find the detailed pairing instructions step by step in a PDF document by flashing the QR-Code below.

https://dam.groupeseb.com/m/3fd9efa007195343/original/Rowenta_RR9695WH_IFU.pdf


6. Use the robot without the app

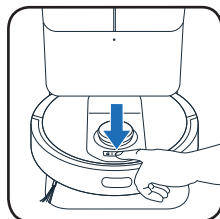

Start cleaning


Press the button ON-OFF to start automatic cleaning. The robot will moisten the mops before starting. The mop moistening process is approximately 3 to 4 minutes. During this step, the mops and pumps are operating. Please do not touch, move, or interfere with the robot and the station. The mop moistening process is approximately 3 to 4 minutes. The robot will scan the area. It will automatically split the room into small zones, first cleans zone edges, and then cleans inside the zone in a zig zag pattern. The robot will clean all accessible area, zone by zone. If the robot doesn't start when you press the button «On-Off», the battery level may be too low, please charge the robot. During cleaning, the robot will regularly return to the station to wash the mops and moisten them before continuing cleaning. This is a normal behaviour. Please note that the auto mop washing frequency can be adjusted in the application.

Do not move the station or the water tanks while cleaning.

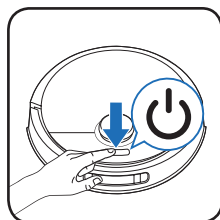


Pause and resume cleaning

Press the button ON-OFF at any time to pause cleaning and press it again to resume cleaning. If the robot is on standby, press the button ON-OFF once to wake up the robot and a second time to start cleaning.

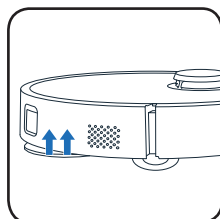

Robot behavior on carpet

During cleaning, when the robot detects a carpet, it will stop the rotary movement of the mops and lift them when the robot is on a carpet. Please note that depending on the carpet thickness, if the mops are wet, it may dampen the carpet. To avoid this, you can set a no-go zone in the application or you can set the robot's behaviour when it detects a carpet and indicate that the robot doesn't climb on the carpet and avoid it.

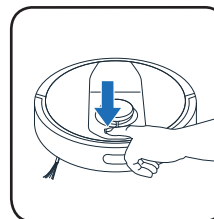

End cleaning


If you start the robot from the station, it will automatically return to its station at the end of the cleaning session or if the battery level is too low. If the battery runs low during the cleaning session, the robot will automatically return to its station to charge. After charging, the robot will resume cleaning where it left off. If the robot is not on its station when it starts cleaning, it will automatically return to its starting point at the end of the cleaning session or if the battery level is too low. At the end of the cleaning session, the robot will automatically return to the station. But if you want to manually end the cleaning session, press the «Home» button once to stop the robot at any time and press it again to send the robot back to the station. If the robot is on standby, press the «Home» button once to wake up the robot and a second time to send it back to the station. If the robot fails to find the station, manually place the robot onto the station.

Station's actions

At the end of the cleaning session, when the robot is docked, the station will automatically:

- recharge the robot's battery,
- empty the robot's dust box
- wash the robot's mops (note that the mop washing process is approximately 3 to 4 minutes),
- collect the waste water in the waste water tank,
- and dry the robot's mops (note that the mop drying process is approximately 3 hours).

When the status indicator light of the station is red, it may indicate that the Hygiene+ dust bag is not installed or is full (and need to be replaced), it may indicate that the clean water tank is empty (and need to be refilled) or the waste water tank is full (and need to be emptied).

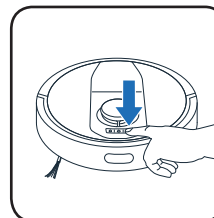

Child Lock settings


To enable or disable child lock, press and hold the "Child Lock" button on the robot for 3 seconds. When the child lock is enabled, the buttons on the robot will not work.

7. Maintain the robot




Please unplug the station and switch off the robot by pressing and holding the ON-OFF button for 5 seconds before any manipulation.

<https://www.youtube.com/playlist?list=PL9XhN3pCkF0b601vKAz3EqxIHUBVgXNXw>

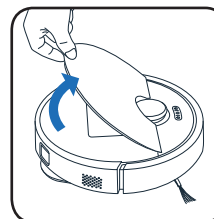

When needed - Clean the dust box


At the end of the cleaning session, the robot returns to its station and automatically empties the dust box, but some dirt may remain in the dust box.

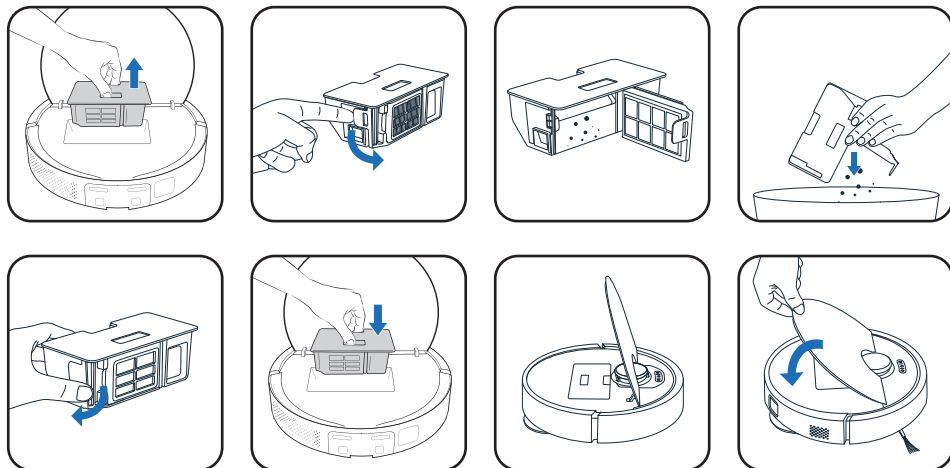

1. Open the flip cover.
Place your fingers in the two holes, press and lift the dust box to take it out of the robot.
2. Use the latch on the side of the dust box to open it.
3. Empty the dirt into the bin.
4. Close the dust box.
5. Place it to its original position in the robot.
6. Close the flip cover.


When needed - Wash the mops

At the end of the cleaning session, the robot returns to its station and automatically washes and dries the mops, but some dirt may remain. Please note that the drying duration can be adjusted in app.

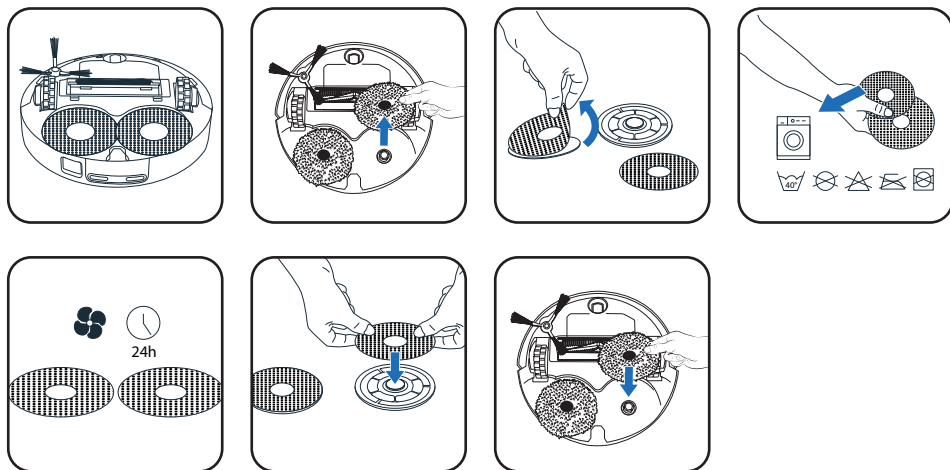


1. Turn the robot upside down.
2. Pull vertically the mops to remove them from the magnetic holders.
3. Unscratch the mop clothes.
4. Wash them under water or in the laundry machine at 40°C.
5. Let them dry for 24 hours.
6. Attach the mop clothes to the mop holder.
7. Install the two mops in the two magnetic holders. Please make sure that mops are correctly installed before starting a cleaning session.

Once a week - Clean the filter

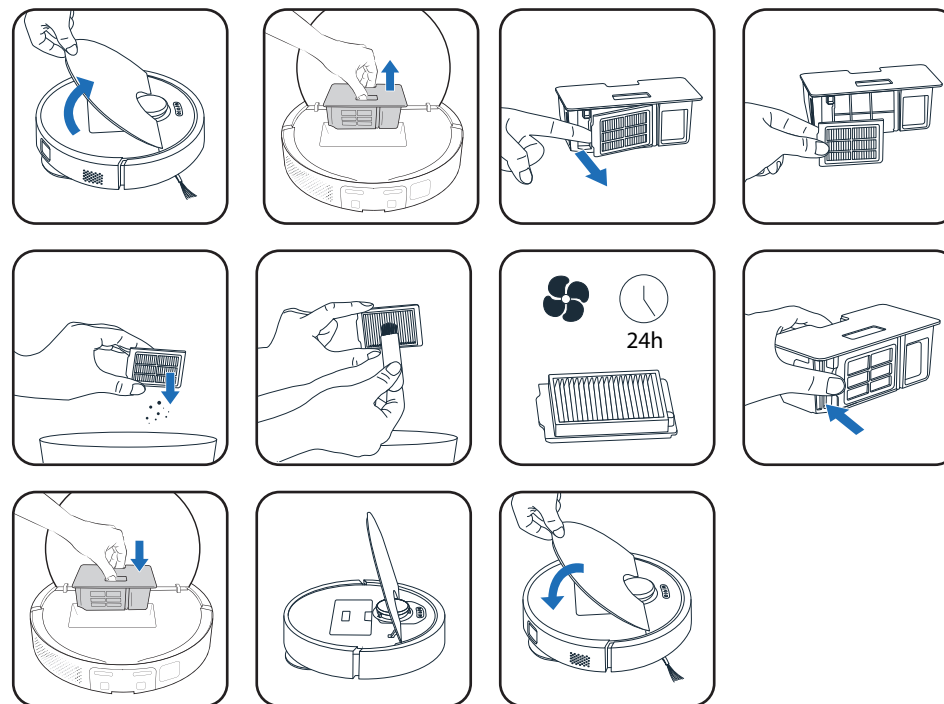

1. Open the flip cover.
2. Place your fingers in the two holes, press and lift the dust box to take it out of the robot.
3. At the back of the dust box, grab the filter frame and pull to unclip it from the dust box.
4. Tap gently the filter above a bin to remove dust. You can use the cleaning tool provided in the packaging to remove dust. You can also wash the filter under water.
5. Let it dry for 24 hours.
6. Once the filter is fully dried, put it back to its original place. Never use the robot without the filter, it would damage the robot.
7. Place it to its original position in the robot. Close the flip cover.


Once a week - Clean the main brush

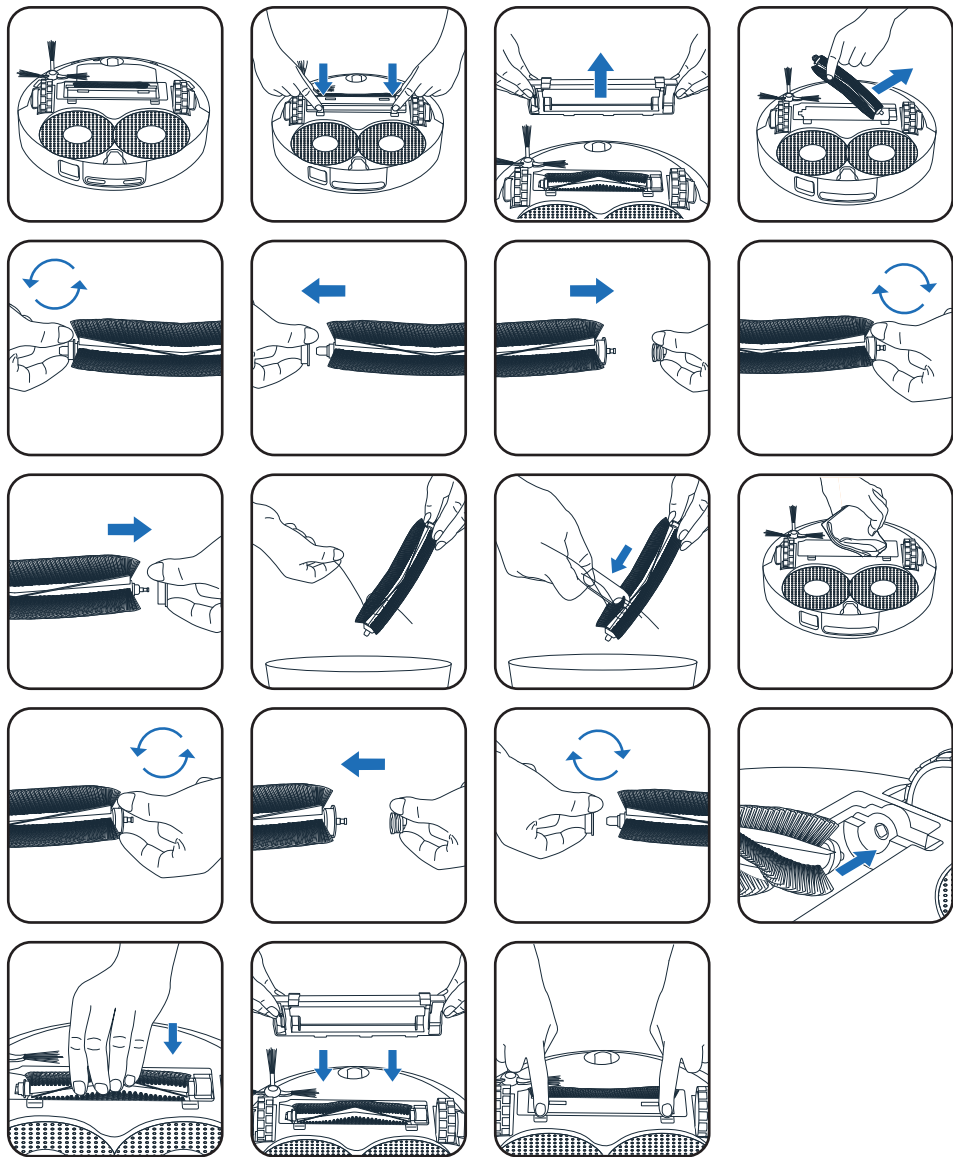

1. Turn the robot upside down.
2. Press the latches of the brush cover.
3. Pull to remove it.
4. Take out the brush.
5. Turn and pull the brush heads on the left and right sides of the brush to remove them.
6. Get rid of tangled hair. You can use the cleaning tool provided in the packaging to remove tangled hair.


7. Clean the main brush compartment and the suction channel with a dry cloth.
8. Replace the brush heads.
9. Re-install the brush in the robot.
10. Re-install the brush cover.
11. The cover is correctly installed when you hear a click sound.

Once a week - Clean the side brush

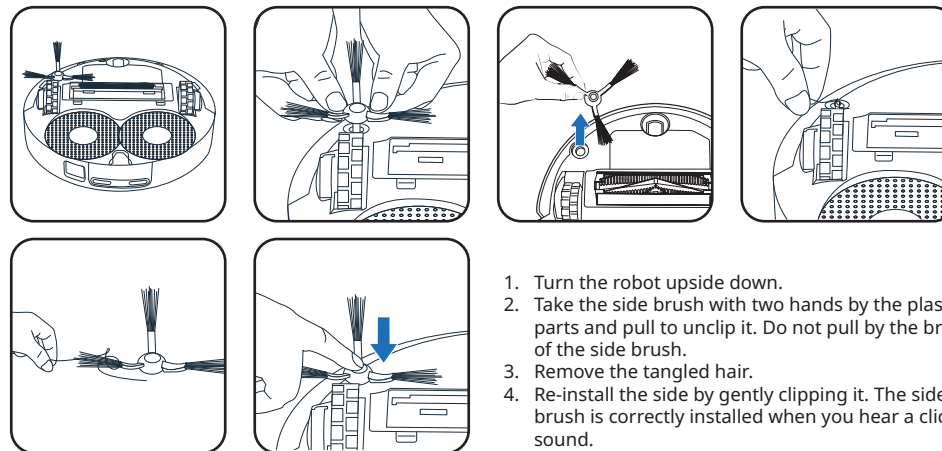


1. Turn the robot upside down.
2. Take the side brush with two hands by the plastic parts and pull to unclip it. Do not pull by the bristles of the side brush.
3. Remove the tangled hair.
4. Re-install the side by gently clipping it. The side brush is correctly installed when you hear a click sound.

Once a week - Clean the sensors

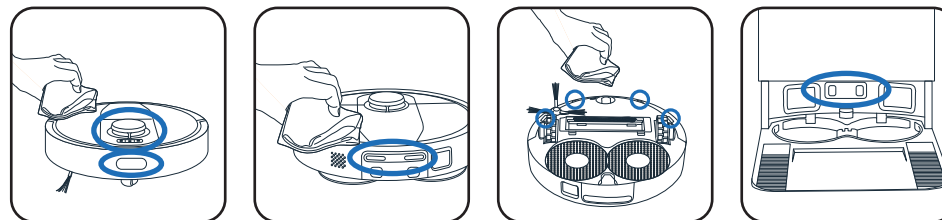

- With a clean, soft and dry cloth, wipe the robot sensors (in front, top, back, side and bottom of the robot), the buttons on the robot, the charging contacts of the robot and the charging contacts of the station.


Every 1-2 weeks - Clean the auto mop washing tray

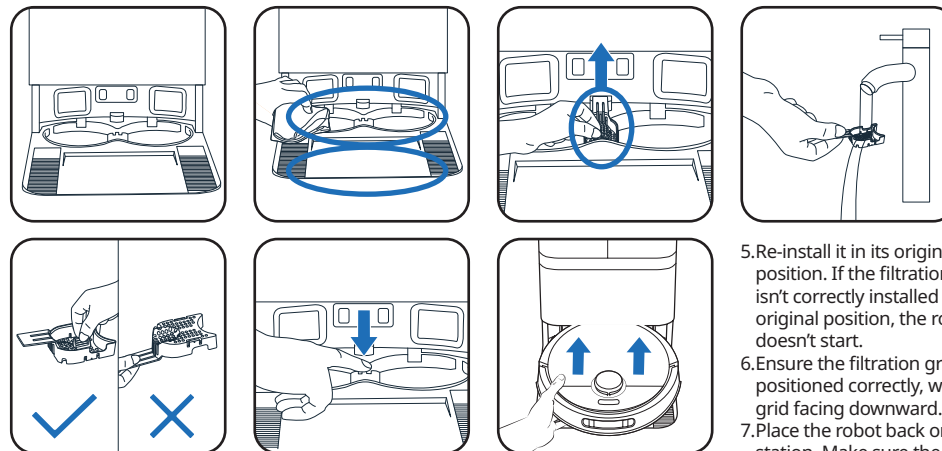

1. Take out the robot from the station to access the washing tray.
2. Use a cloth or brush to clean any dirt from the washing tray.
3. Unclip the filtration grid.
4. Remove any dirt and wash it under water.

5. Re-install it in its original position. If the filtration grid isn't correctly installed in its original position, the robot doesn't start.
6. Ensure the filtration grid is positioned correctly, with the grid facing downward.
7. Place the robot back onto the station. Make sure the charging contacts on the robot and the station are fully aligned. When the robot is correctly installed, you will hear a beep sound.

Every 2 weeks - Clean the clean water tank

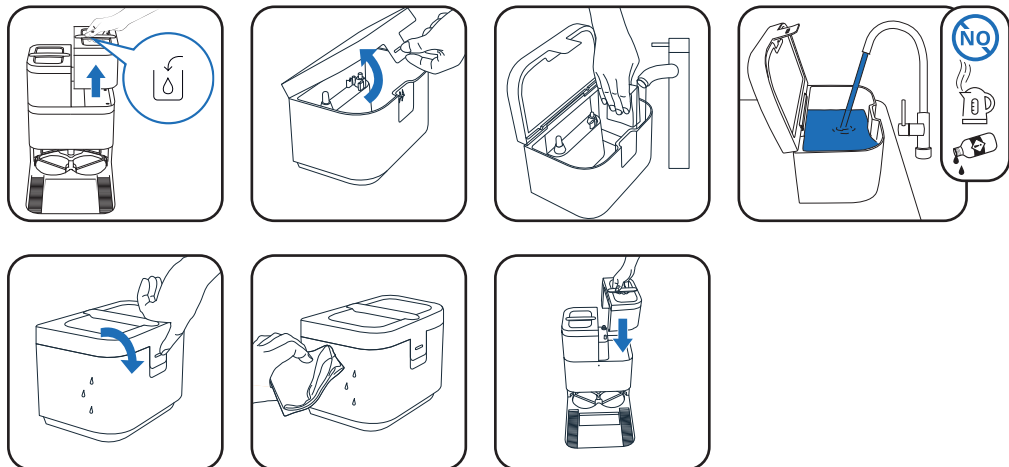


1. Pull out the clean water tank.
2. Open the lid.
3. Use clean water to wash the tank. Do not apply too much force to avoid damaging components and floater of the tank.
4. Add clean water up to the MAX level. Do not add hot water to the water tank, as it may deform the tank.
5. Do not add any substance like clearing agents,

essential oils, detergent or "Clean it" cleaning solution other than clean water to prevent damaging the station and the robot.

6. Close the lid.
7. Wipe the outside of the tank dry.
8. Put the tank back to its original position in the station.

After emptying the waste water - Clean the waste water tank

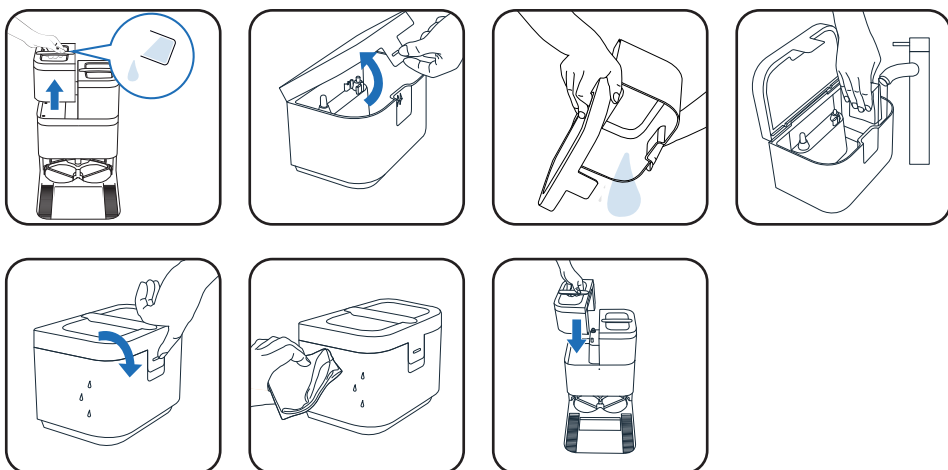


1. When the waste water tank is full, the light indicator of the station is blinking red. Pull out the waste water tank.
2. Open the lid.
3. Pour out the waste water.
4. Use clean water to wash the tank.

Do not apply too much force to avoid damaging components and floater of the tank.


5. Close the lid.
6. Wipe the outside of the tank dry.
7. Put the tank back to its original position in the station.

Once a month - Clean the wheels

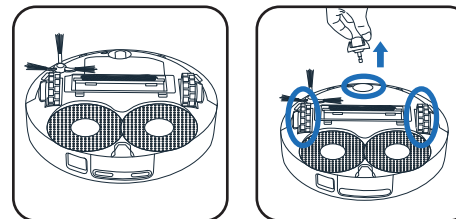


- The wheels may be entangled by hair or dirt. Turn the robot upside down. Clean the wheels by removing the tangled hair. You can remove the caster to remove any dirt before putting it back.


Every 2-3 months (depending on actual use) - Replace the dust bag

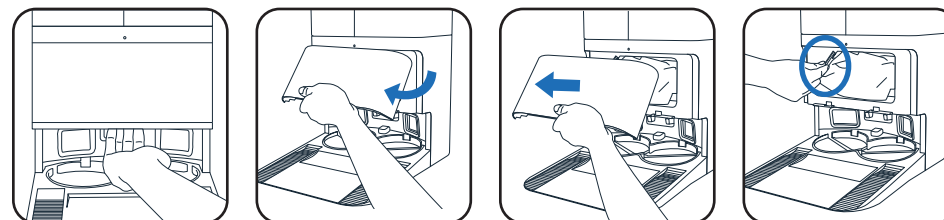


1. Please replace the dust bag when the app notifies to change it or you can change the dust bag every 2-3 months depending on actual use. Remove the dust bag compartment.

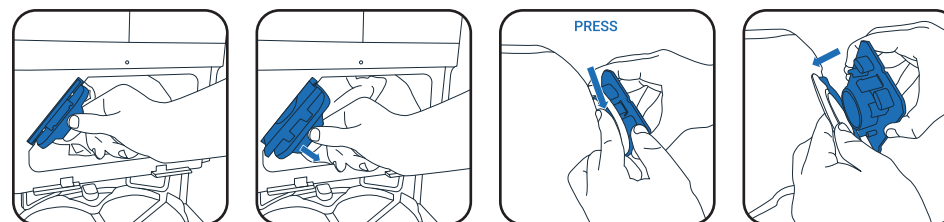


2. Grab the dustbag adapter by the handle. Pull the adapter towards you to remove it from its slot. The dust bag attached to it will come out at the same time. To remove the dustbag from the adapter, Press the small plastic tab to release the bag from the notch in the adapter. The bag will detach easily.

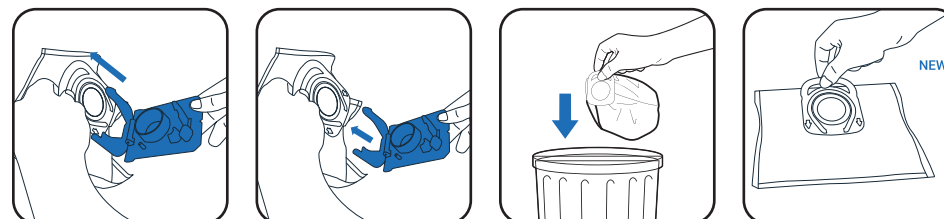

3. Slide the used dustbag by the handle straight out of the adapter. Throw the used dust bag into a waste bin. Take a new dust bag. Do not throw away the adapter.

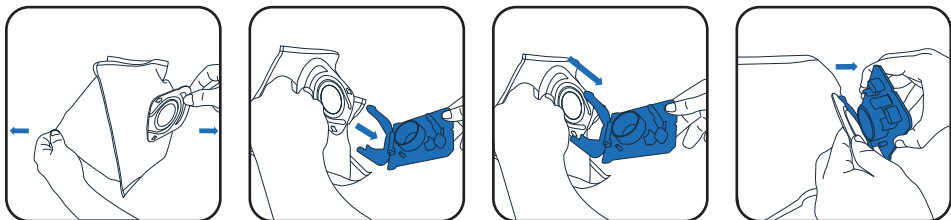

4. Slightly inflate the dust bag by pulling gently on each side of the bag. Grasp the bag by the handle and smoothly slide the new dust bag into the adapter slot.

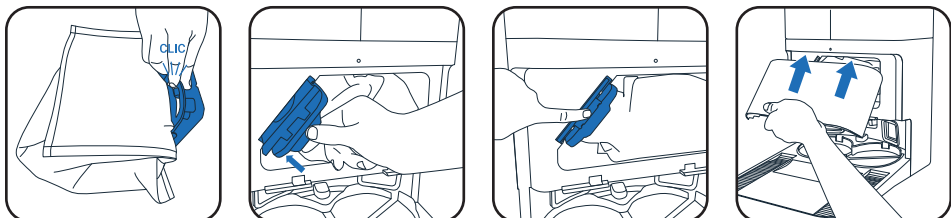

5. Once the bag is fully inserted into the adapter slot, fold it against the adapter until you hear a CLIC sound. Slide the adapter and the bag into the station. Make sure the adapter is fully inserted by pushing it all the way in.



6. Put the dust bag compartment cover back in place, making sure the 4 notches at the top of it fit into the station.

8. Component replacement frequency

The replacement frequency is for reference only, if a component or accessory is damaged, it should be replaced promptly to ensure efficient cleaning. Components and accessories can be bought on: www.rowenta.com

Component	Cleaning frequency	Replacement frequency
Dust box	When needed	Not applicable
Mops	When needed	After 100 washes
Filter	Once a week	Every 6 months
Main brush	Once a week	If required
Side brush	Once a week	Every 6 months
Sensors	Once a week	Not applicable
Auto mop washing tray	Every 1-2 weeks	Not applicable
Clean water tank	Every 2 weeks	Not applicable
Waste water tank	After emptying the waste water	Not applicable
Wheels	Once a month	Not applicable
Dust bag	Not applicable	Every 2-3 months (when full, depending on actual use)

In order to extend the battery lifespan, always keep the robot charging at its station. When not using the robot for a long time, please fully charge the battery, switch off the robot by pressing and holding the ON-OFF button for 5 seconds. Store the robot in a cool dry place.

10. Do's and don'ts

- The robot has anti-drop sensors to detect stairs. The robot will change direction when detecting them. For optimum anti-drop sensors efficiency, remove any item (ex: shoe) from the stairs. When using the robot in a raised area, place a physical barrier at the edge of a drop to prevent accidental falls.
- Do not shake the robot.
- Do not try to remove the mops during cleaning.
- Do not throw away the dust bag adapter when replacing the dust bag.
- Do not put water or any wet cloth on the robot.
- Do not charge the robot when the ground is flooded.
- Do not submerge the robot in water.
- Do not use the robot on wet surfaces or surfaces with standing water.
- Do not use the product if the cord or charger is damaged.
- Do not leave children unattended, do not allow children to play with the robot.
- Do not use the robot outside home.
- Do not use the robot in a overheated environment.
- Do not use the robot when the home temperature is below 5°C (41°F) and above 40°C (104°F).
- Do not spread cleaning agents on the floor before using the robot.
- Do not use cleaning agents, aerosol cleaners or cleaning spray to clean the robot, the filter, the station or the dust bag.
- Do not throw the robot in the fire.
- Do not use the robot to clean broken glass.
- Do not walk or climb on the robot, do not move the robot with the foot.
- Do not allow children or pets to ride on the robot.
- Do not put any item on the robot.
- Do not use the robot without the filter, it would damage the robot.
- Before disposing of the device, remove the battery and dispose of it in accordance with local laws and local arrangements. If you have any questions, please contact your product dealer who can tell you what to do.



11. Unpair the robot and delete personal data

To disable Wi-Fi module on robot, simultaneously press the "Home" and "On-Off" buttons during 5 seconds, until you hear a beep sound. The robot will automatically removes its connection to the phone. The 2 buttons will then slowly flash for a few minutes. The robot will automatically removes its connection to the phone and router. Once it is done, you can't go back. To pair again, you will need to do the pairing process again. To delete personal data stored in the robot, please reset the robot. Press and hold the «HOME» button for 15 seconds, until you hear a beep sound.

Fault	Solutions
Cannot start the robot	<ul style="list-style-type: none"> • Make sure the robot is connected to power supply. • Make sure the battery is fully charged. • Make sure the robot is ON. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Check whether the dust box is properly installed.
The robot suddenly stops working	<ul style="list-style-type: none"> • Check whether the robot is stuck or blocked by obstacles. • Check whether the battery is too low. Please charge it. • If the problem persists, please switch OFF the robot by pressing and holding the ON-OFF button for 5 seconds. Wait for 30 seconds, and switch ON by pressing the ON-OFF button for 5 seconds to restart it. • The appliance may be overheating: <ul style="list-style-type: none"> - Stop the appliance and leave cool for at least 1 hour. - If it overheats on repeated occasions, contact the Approved Services Center.
Cannot charge the robot	<ul style="list-style-type: none"> • Make sure the station is properly connected to the power. • Make sure the robot is ON. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Check whether the indicator on the robot is flashing during charging. • Wipe dust off charging contacts with dry cloth. • Make sure the robot and the station are connected through the charging contacts.
The robot cannot return to the station	<ul style="list-style-type: none"> • Clear the station of objects within 0.5m on the left and right sides and within 1.5m ahead. • Make sure that the robot starts cleaning from the station without abnormal movement. • When the robot is near the station, it can return faster. But if the station is located far away, the robot will need more time to return. Please wait during its return. • Clean the charging contacts with dry cloth.
The cleaning schedule is not executed	<ul style="list-style-type: none"> • Make sure the robot has been powered on. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Make sure the cleaning schedule has been set correctly in the application at the desired time, and the cleaning schedule is saved. • Check whether the battery level is too low to start cleaning. • The robot will not start any scheduled cleaning when a task is being performed. • Check whether the dust box is properly installed.

Fault	Solutions
The suction is whistling or running is very loud during cleaning	<ul style="list-style-type: none"> • Check the suction inlet for any obstruction. • Empty the dust bin. • Clean the filter. • Check whether the filter is wet due to water or other liquids on the floor. Let the filter dry naturally thoroughly before use. • Check whether the dust box is properly installed. • Check whether the main brush or side brush is blocked by any foreign item, remove the main brush or side brush and clean it.
The main brush does not rotate	<ul style="list-style-type: none"> • Check whether the main brush is blocked by any foreign item, remove the main brush and clean it. • Check whether the central brush and the brush cover are correctly installed.
The side brush drops out of place during cleaning	<ul style="list-style-type: none"> • The side brush is not properly installed, the side brush is properly installed when you hear a click sound.
The mops cannot rotate	<ul style="list-style-type: none"> • The mops may be blocked by a foreign object, please remove it. • The mops are not correctly installed, the mops are correctly installed when you hear a click sound.
Abnormal action or sweep route of the robot	<ul style="list-style-type: none"> • Carefully clean the sensors with dry cloth. • Switch OFF the robot by pressing and holding the ON-OFF button for 5 seconds, wait for 30 seconds and switch on by pressing and holding the ON-OFF button for 5 seconds to restart the robot.
No water during mopping	<ul style="list-style-type: none"> • Make sure there is enough water in the clean water tank of the station. • Check whether the clean water tank is correctly installed. • Check whether the frequency of auto-return to wash the mops is set at the desired level in the application.

Fault	Solutions
The robot cannot connect to your Wi-Fi network	<ul style="list-style-type: none"> • Ensure that your Wi-Fi router supports 2.4GHz and 802.11 b/g/n bands as this equipment does not support 5GHz bands. • Check if the automatic reconnection to your domestic Wi-Fi network is correct • Activate the mobile data of your smartphone • Don't use a VPN (Virtual Private Network) • Retry the process and check that you have selected the correct Wi-Fi network • Retry the process and make sure you have entered the correct Wi-Fi password • Keep your phone close to the robot and the station until the end of the pairing process • After several attempts, unplug and replug the product • Reset the robot : press and hold the « HOME» button for 15 seconds. • Press and hold for 5 seconds the « HOME » and « ON-OFF » button until the two buttons lights are blinking • Restart your smartphone • In case a warning window appears for internet connection, please maintain the connection with the robot. If the failure persists, contact our support team (telephone number depending on your country of residence, find it on the assistance leaflet in the packaging).
The map is lost	<ul style="list-style-type: none"> • The map may be lost if the robot has been manually moved to another location during cleaning or if the home environment has been changed (moved furniture). Please restart mapping by launching in the app a new exploration or a new cleaning session from the station.
The robot returns to the station before it has finished cleaning	<ul style="list-style-type: none"> • The battery level may be too low to finish cleaning, the robot will return to the station to charge. When its battery is full, the robot will resume cleaning where it has left to finish cleaning. • The robot may be unable to reach certain areas blocked by furniture or barriers, tidy up these area to make them accessible. • Verify the no go zones and no mop zones set in the application. Add, modify or delete zones according to your needs.
The robot gets stuck	<ul style="list-style-type: none"> • The robot may be tangled with something, manually remove the blocked item and restart the cleaning session by pressing the ON-OFF button. • The robot may be stuck under furniture with an entrance of similar height, please set a physical barrier or a no go zone in the app. • Rotate and press the wheels to check whether there is any foreign object wrapped or stuck, remove it.

Fault	Solutions
The station doesn't wash the mops	<ul style="list-style-type: none"> • There is not enough water in the clean water tank, please add water in the clean water tank. • The waste water tank is full, please empty it. • Please clean the openings of the waste water filter.
Cannot insert the dust bag in the dust bag compartment	<ul style="list-style-type: none"> • Make sure you have the dust bag adapter. • Make sure the dust bag is fully inserted into the adapter slot, fold it against the adapter until you hear a CLICK sound. Slide the adapter and the bag into the station. • Make sure the adapter is fully inserted by pushing it all the way in.

Uporabniški priročnik


1. Kaj je v škatli?
2. Pregled izdelka
3. Pred uporabo
4. Namestite sesalnik
5. Povežite sesalnik z brezplačno aplikacijo
6. Uporaba sesalnika brez aplikacije
7. Vzdrževanje sesalnika
8. Pogostost zamenjave sestavnih delov
9. Shranjevanje sesalnika, ko ga ne uporabljate
10. Priporočeno in odsvetovano
11. Prekinite povezavo s sesalnikom in izbrišite osebne podatke
12. Pogoste težave in rešitve

- p. 23
- p. 23
- p. 24
- p. 24
- p. 27
- p. 27
- p. 28
- p. 35
- p. 36
- p. 36
- p. 36
- p. 37

Pred prvo uporabo natančno preberite knjižico "Varnostna navodila in navodila za uporabo".


Za več informacij:
www.rowenta.com

1. Kaj je v škatli?

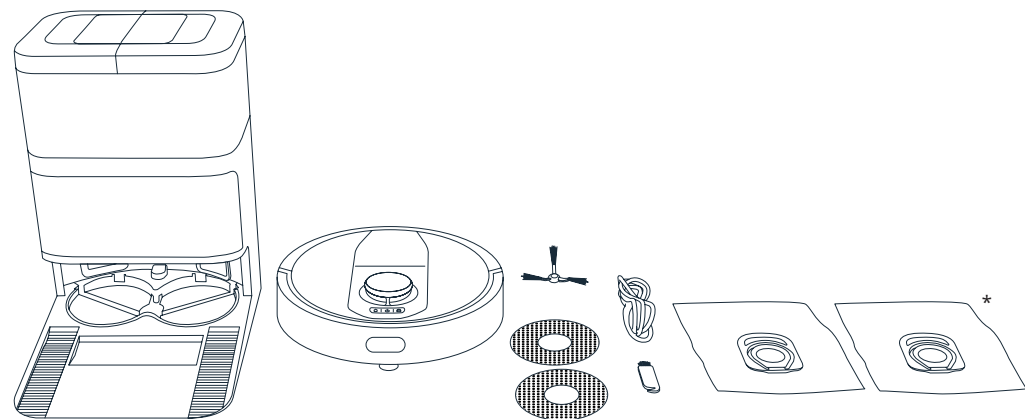

*odvisno od modela

2. Pregled izdelka

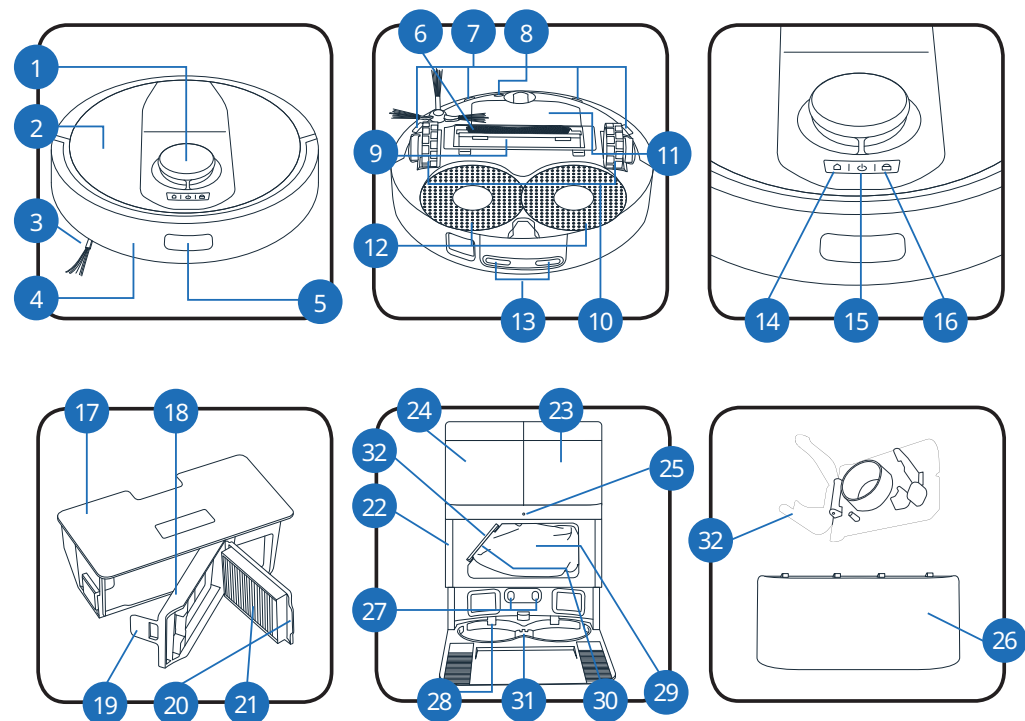

1. LIDAR
2. Preklopni pokrov
3. Stranska krtača
4. Odbijač
5. Senzor za zaznavanje ovir
6. Glavna krtača
7. Senzorji za preprečevanje padca
8. Ultrazvočni senzor za preproge
9. Pokrov glavne države
10. Kolesce
11. Baterija
12. Vrtljive krpe za brisanje z magnetnimi držali
13. Stiki za polnjenje
14. Gumb Domov
 - Pritisnite, da se sesalnik vrne na postajo.
15. Gumb za vklop/izklop (Napajanje, Začetek, Premor)
 - Pritisnite in zadržite za vklop ali izklop.
 - Pritisnite za zagon ali zaustavitev čiščenja.
16. Gumb otroške ključavnice
 - Pritisnite in pridržite 3 sekunde, da omogočite/izključite otroško ključavnico (gumbi se zaklenejo, da se prepreči naključno pritiskanje gumbov).
17. Posoda za prah
18. Odprtina posode za prah
19. Zapah posode za prah
20. Okvir filtra
21. Filter
22. Postaja vse-v-enem
23. Posoda za čisto vodo
24. Posoda za odpadno vodo
25. Indikator stanja
 - Ugasnjena lučka: izklop
 - Utripa bela lučka: postaja deluje
 - Utripa rdeča lučka: ena ali več posod je odstranjenih/vrečka ni nameščena/napaka
 - Sveti bela lučka: normalno stanje
26. Pokrov predala za vrečko za prah
27. Stiki za polnjenje
28. Pladenj za samodejno pranje krp za brisanje
29. Higijska vrečka za prah
30. Ročaj higijske vrečke za prah
31. Filtrska mreža
32. Prikluček za higijsko vrečko


3. Pred uporabo

Čeprav se lahko sesalnik sam izogne določenim oviram, preberite naslednje nasvete za učinkovitejše čiščenje.

Pospravite kable, vrvice ter majhne in nepritrjene predmete. S tal odstranite vse nestabilne, lomljive, dragocene ali nevarne predmete.

Prepričajte se, da so vrata vsakega prostora odprta.

Sesalnik bo morda imel nekaj težav pri sesanju temnih tal in preprog, na primer preprog z resicami, predebelih preprog, z daljšimi trakci ali prelahkih preprog (npr. kopalniške preproge). Za optimalno učinkovitost senzorjev za preprečevanje padca odstranite vse predmete (npr. čevlje) s stopnic. Če sesalnik uporabljate na dvignjenem območju, na rob postavite fizično oviro, da preprečite nenamerne padce. Ne stojte v ozkih prostorih, kot so hodniki, da ne blokirate sesalnika.

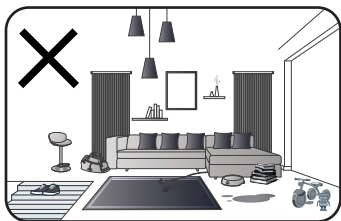

Neposredna izpostavljenost sončni svetlobi ali močnim svetlobnim kontrastom lahko vpliva na senzorje sesalnika. Sesalnik se lahko začne nenavadno obnašati ali preneha delovati. Sesalnik prestavite na drugo mesto in ga ponovno zaženite. Za optimalno delovanje je priporočljivo, da robota pred prvo uporabo popolnoma napolnite. Za lažje raziskovanje lahko, ko robot ustvari zemljevid, postavite fizične ovire.






4. Namestite sesalnik




Skenirajte zgornjo kodo QR, da si ogledate videoposnetek z navodili, kako namestiti in povezati sesalnik. Za podrobnejše informacije preberite naslednja navodila.

<https://www.youtube.com/playlist?list=PL9XhN3pCkF0b601vKAz3EqXIHUBvgXNXw>

4. Namestite sesalnik

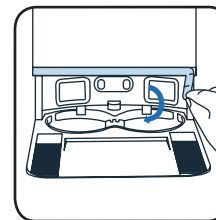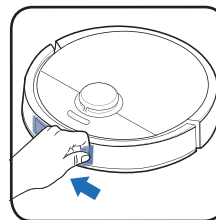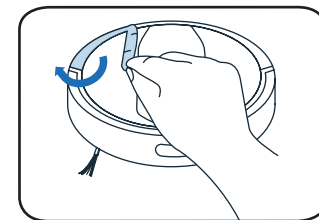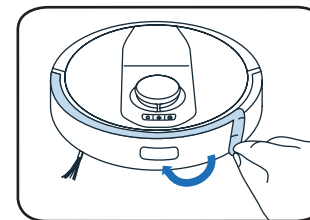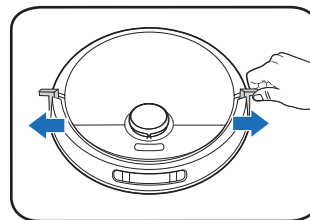


Odstranite zaščite
Odstranite vse zaščite na postaji in sesalniku.

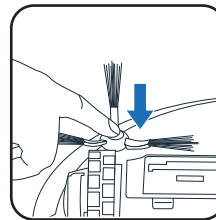


Namestite stransko krtačo in krpe za brisanje

Obrnite sesalnik in namestite stransko krtačo tako, da jo nežno pripnete. Ko zaslišite klik, je stranska krtača pravilno nameščena.

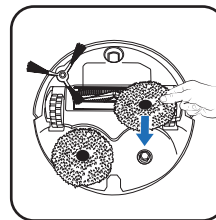


V dva magnetna držala namestite krpe za brisanje. Ko zaslišite klik, sta krpi za brisanje pravilno nameščeni.

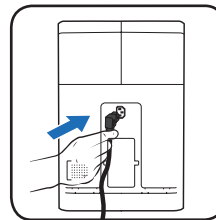


Namestite postajo in jo vključite v napajanje.


Prikluček napajalnega kabla vstavite v napajalni priključek postaje. Kabel lahko ohranite pospravljen za postajo.

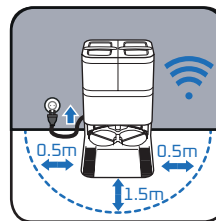

Postajo namestite na trda in ravna tla. Izogibajte se parketu, lesenim podom in preprogam. Postajo postavite na prazen prostor ob steno, brez stopnic pred postajo. Ohranite vsaj 0,5 m prostora na obeh straneh in 1,5 m spredaj. Prepričajte se, da je izbrana lokacija blizu usmerjevalnika Wi-Fi ali ima dober signal Wi-Fi. Na območju okoli postaje naj ne bo kakršnih koli predmetov, odsevnih površin, ogledal, miz in stolov. Postajo postavite stran od neposredne sončne svetlobe. Napajalni kabel priključite v vtičnico. Prepričajte se, da se napajalni kabel nahaja za postajo in je urejen ob steni.

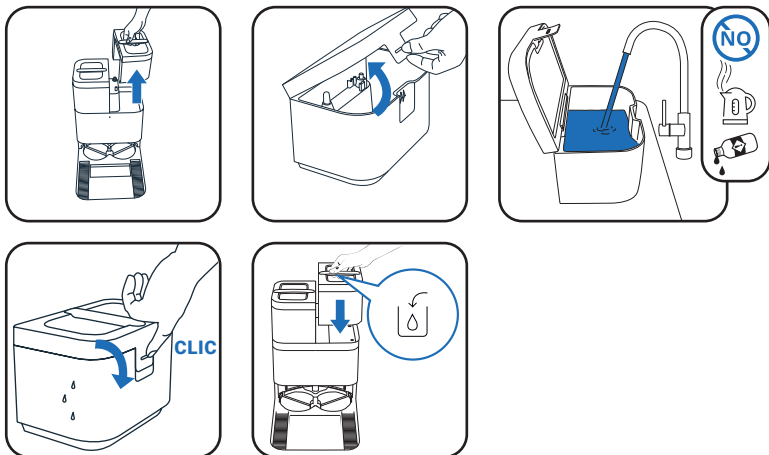**V posodo za čisto vodo dolijte vodo.**

Izvalcite posodo za čisto vodo. Odprite pokrov in vodo napolnite do oznake najvišjega nivoja. Ne presežite oznake MAX. V posodo za vodo ne dodajajte vroče vode, saj lahko pride do poškodbe posode. Ne dodajajte nobene snovi, kot so čistilna sredstva, eterična olja, detergent ali čistilna raztopina "Clean it", razen čiste vode, da preprečite poškodbe postaje in robota. Zaprite pokrov. Pokrov je pravilno zaprt, ko zaslišite klik. Znova namestite posodo za čisto vodo na prvotno mesto v postaji.

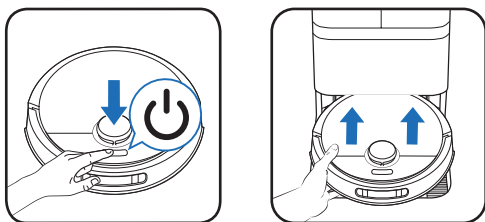**Vklopite sesalnik**

Sesalnik vklopite tako, da pritisnete in nekaj sekund držite gumb za zagon, dokler se ne prižgejo lučke na sesalniku. Slišali boste pisk.

Sesalnik namestite na postajo

Ko je sesalnik vklopljen, ga namestite na postajo. Prepričajte se, da so stiki za polnjenje na sesalniku in postaji popolnoma poravnani. Ko je robot pravilno nameščen, boste slišali zvočni signal. Če indikator utripa belo, baterija ni popolnoma napolnjena. Počakajte 3–4 ure, da se sesalnik popolnoma napolni. Za optimalno delovanje je priporočljivo, da robota pred prvo uporabo popolnoma napolnite. Ko je baterija popolnoma napolnjena, indikator sveti belo. Pred prvim čiščenjem se prepričajte, da je sesalnik popolnoma napolnjen.

Informacije

Upoštevajte, da se bo sesalnik samodejno vklopil, ko bo postavljen v postajo. Sesalnika med polnjenjem ni mogoče izklopiti. Upoštevajte, da bo pri prvem čiščenju v novem okolju sesalnik ustvaril zemljevid doma. Sesalnika med prvim čiščenjem ne dvignite, to bi prekinilo ustvarjanje načrta. Pred začetkom čiščenja se prepričajte, da so krpe za brisanje tal pravilno nameščene. Krp za brisanje tal med čiščenjem ne odstranjujte. Če imate preproge z resicami, okoli preprog postavite ovire, da se sesalnik ne bo zapletel v resice, saj bi to preprečilo ustvarjanje načrta. Če imate zunanji prostor (vrt, balkon, teraso itd.), do katerega je mogoče dostopati prek praga, nižjega od 2 cm, ali brez praga (npr. skozi francosko okno, drsna vrata, vrata zimskega vrta itd.), zaprite dostop, da sesalnik ne bo mogel iz stavbe.



V pametnem telefonu odprite trgovino Google Play (Android) ali App Store (iOS). Poiščite aplikacijo "Rowenta Robots" ali za namestitev aplikacije poskenirajte kodo QR. Odprite aplikacijo in sledite navodilom na zaslonu, da povežete sesalnik.


<https://rowentarobots.smart.link/21xzb2xli>




Podrobna navodila za seznanjanje po korakih lahko najdete tudi v dokumentu PDF, tako da skenirate spodnjo kodo QR.

https://dam.groupeseb.com/m/3fd9efa007195343/original/Rowenta_RR9695WH_IFU.pdf


6. Uporaba sesalnika brez aplikacije

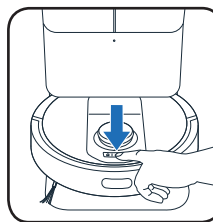**Začnite s čiščenjem**


Pritisnite gumb za začetek/zaustavitev, da zaženete samodejno čiščenje. Pred začetkom delovanja počakajte, da sesalnik navlaži krpe za brisanje. Proces vlaženja krp traja približno 3 do 4 minute. Med tem korakom krpe in črpalke delujejo. Prosimo, ne dotikajte se, ne premikajte in ne posegajte v robota ali postajo. Proces vlaženja krp traja približno 3 do 4 minute. Sesalnik bo pregledal območje. Prostor bo samodejno razdelil na manjša območja ter najprej očistil robove območja, nato pa še notranjost območja v cikcakastem vzorcu. Sesalnik bo območje za območjem očistil vse dostopne površine. Če se sesalnik ne zažene, ko pritisnete gumb za zagon, je raven baterije morda prenizka. Napolnite sesalnik. Med čiščenjem se sesalnik redno vrača na postajo, da opere krpe in jih ponovno navlaži, preden nadaljuje s čiščenjem. To je običajno. Upoštevajte, da lahko pogostost samodejnega pranja krp za brisanje prilagodite v aplikaciji. Med čiščenjem ne premikajte postaje ali posod za vodo.

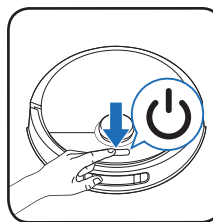**Zaustavitev in nadaljevanje čiščenja**

Kadar koli lahko PRITISNITE gumb za začetek/zaustavitev, da začasno zaustavite čiščenje, in ga znova pritisnete za nadaljevanje čiščenja. Če JE sesalnik v stanju mirovanja, enkrat pritisnite gumb za začetek/zaustavitev, da zbudite sesalnik, in še enkrat, da začnete čiščenje.

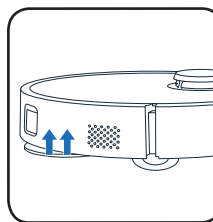**Obnašanje sesalnika na preprogi**

Ko sesalnik med čiščenjem zazna preprogo, ustavi rotacijsko gibanje krp za brisanje in jih dvigne, ko je sesalnik na preprogi. Če so krpe za brisanje mokre, lahko odvisno od debeline preproge, te navlažijo preprogo. Da bi se temu izognili, lahko v aplikaciji nastavite območje prepovedi vstopa ali pa nastavite obnašanje sesalnika, ko ta zazna preprogo, in označite, da se sesalnik ne sme povzpeti na preprogo in se ji mora izogniti.

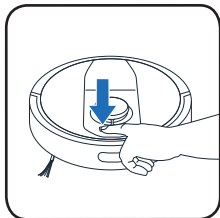**Zaključek čiščenja**


Če sesalnik zažene s postaje, se bo samodejno vrnil na postajo ob koncu seje čiščenja ali če je raven baterije prenizka. Če se baterija med sejo čiščenja izprazni, se bo sesalnik samodejno vrnil na postajo za polnjenje. Po polnjenju bo sesalnik nadaljeval s čiščenjem, kjer je končal. Če sesalnik ni na svojem mestu, ko začne s čiščenjem, se bo samodejno vrnil na začetno točko, ko je seja čiščenja končana ali če je raven baterije prenizka. Ob koncu seje čiščenja se bo sesalnik samodejno vrnil na postajo. Če želite ročno končati sejo čiščenja, enkrat pritisnite gumb Domov, da kadar koli izklopite sesalnik, in ga znova pritisnite, da pošljete sesalnik nazaj na postajo. Če je sesalnik v stanju mirovanja, enkrat pritisnite gumb Domov, da zbudite sesalnik, in še enkrat, da ga pošljete nazaj na postajo. Če sesalnik ne najde postaje, ga ročno postavite na postajo.

Dejavnosti postaje

Ob koncu čiščenja, ko je sesalnik priključen na postajo, postaja samodejno:

- napolni baterijo sesalnika,
- izprazni posodo za prah,
- opere krpe za brisanje tal. Upoštevajte, da proces pranja krp traja približno 3 do 4 minute.
- zbere odpadno vodo v posodi za odpadno vodo,
- in posuši krpe za brisanje. Upoštevajte, da proces sušenja krp traja približno 3 ure.

Kadar je indikator stanja postaje rdeč, to lahko pomeni, da vrečka za prah Hygiene+ ni nameščena ali je polna (in jo je treba zamenjati), lahko pomeni, da je posoda za čisto vodo prazna (in jo je treba napolniti) ali da je posoda za odpadno vodo polna (in jo je treba izprazniti).

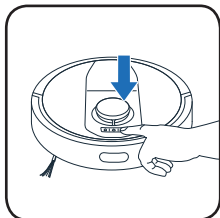**Nastavitev otroške ključavnice**


Če želite omogočiti ali onemogočiti otroško ključavnico, pritisnite in za 3 sekunde pridržite gumb "Otroška ključavnica" na sesalniku. Ko je otroška ključavnica omogočena, gumbi na sesalniku ne bodo delovali.

7. Vzdrževanje sesalnika











Pred kakršnim koli posegom izklopite postajo in izklopite robota s pritiskom in držanjem gumba ON-OFF 5 sekund.

<https://www.youtube.com/playlist?list=PL9XhN3pCkFOb601vKAz3EqxIHUBVgXNXw>

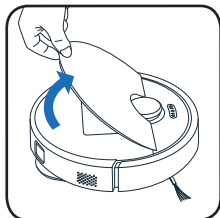**Po potrebi očistite posodo za prah**

Ob koncu seje čiščenja se sesalnik vrne na postajo in samodejno izprazni posodo za prah, vendar lahko nekaj umazanije ostane v posodi za prah.








7. Vzdrževanje sesalnika

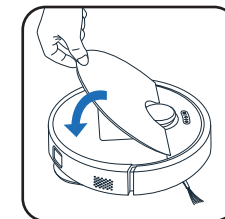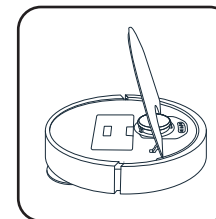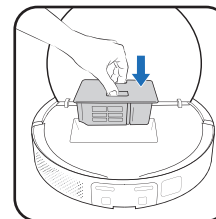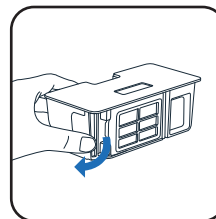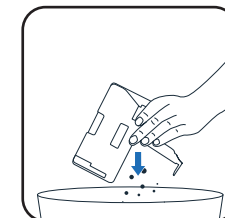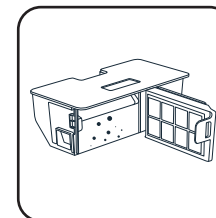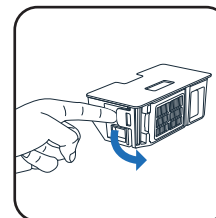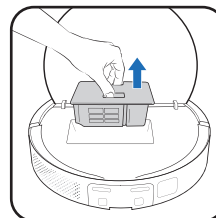

1. Odprite preklopni pokrov. Prste položite v dve luknji, pritisnite in dvignite posodo za prah, da jo odstranite iz sesalnika.
2. Uporabite zapah ob strani posode za prah, da se odpre.
3. Izpraznite umazanijo v smeti.
4. Posodo za prah zaprite.
5. Postavite jo na prvotno mesto na sesalniku.
6. Zaprite preklopni pokrov.


Po potrebi operite krpe za brisanje

Ob koncu seje čiščenja se sesalnik vrne na postajo in samodejno opere in posuši krpe za brisanje, vendar lahko nekaj umazanije ostane. Upoštevajte, da lahko trajanje sušenja prilagodite v aplikaciji.

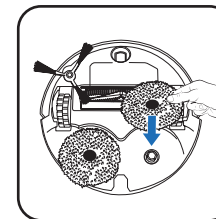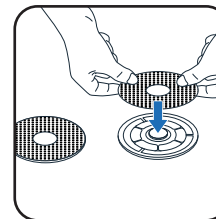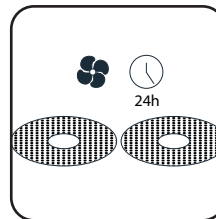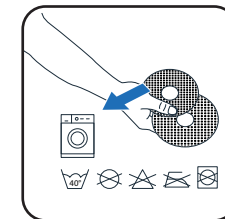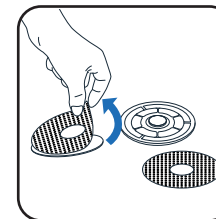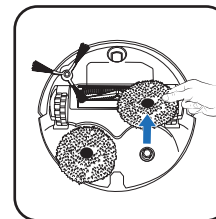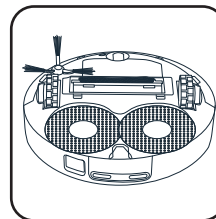

1. Sesalnik obrnite okoli.
2. Krpe za brisanje tal povlecite navpično, da jih odstranite iz magnetnih držal.
3. Odstranite krpe za brisanje.
4. Operite jih pod tekočo vodo ali v pralnem stroju pri 40 °C.
5. Pustite, da se sušita 24 ur.
6. Krpe za brisanje pritrdite na držala za krpe.
7. V dva magnetna držala namestite krpe za brisanje. Pred začetkom čiščenja se prepričajte, da so krpe za brisanje tal pravilno nameščene.


Enkrat tedensko očistite filter.

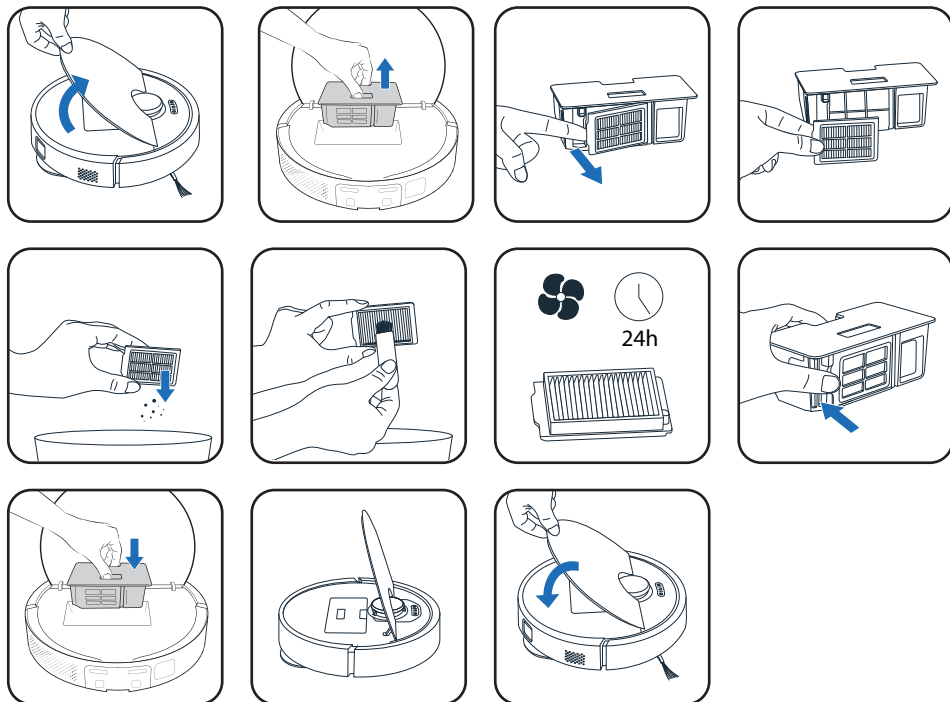

1. Odprite preklonni pokrov.
2. Prste položite v dve luknji, pritisnite in dvignite posodo za prah, da jo odstranite iz sesalnika.
3. Na zadnji strani posode za prah zgrabite okvir filtra in ga potegnite, da ga odpnete iz posode za prah.
4. Nežno udarjajte filter nad košem za smeti, da z njega odstranite prah.
Za odstranjevanje prahu lahko uporabite orodje za čiščenje, ki je priloženo v embalaži. Filter lahko operete tudi pod vodo.

5. Pustite, da se suši 24 ur.
6. Ko se filter popolnoma posuši, ga vrnite nazaj na prvotno mesto. Sesalnika nikoli ne uporabljajte brez filtra, saj se lahko poškoduje.
7. Postavite jo na prvotno mesto na sesalniku. Zaprite preklonni pokrov.


Enkrat tedensko očistite glavno krtačo.

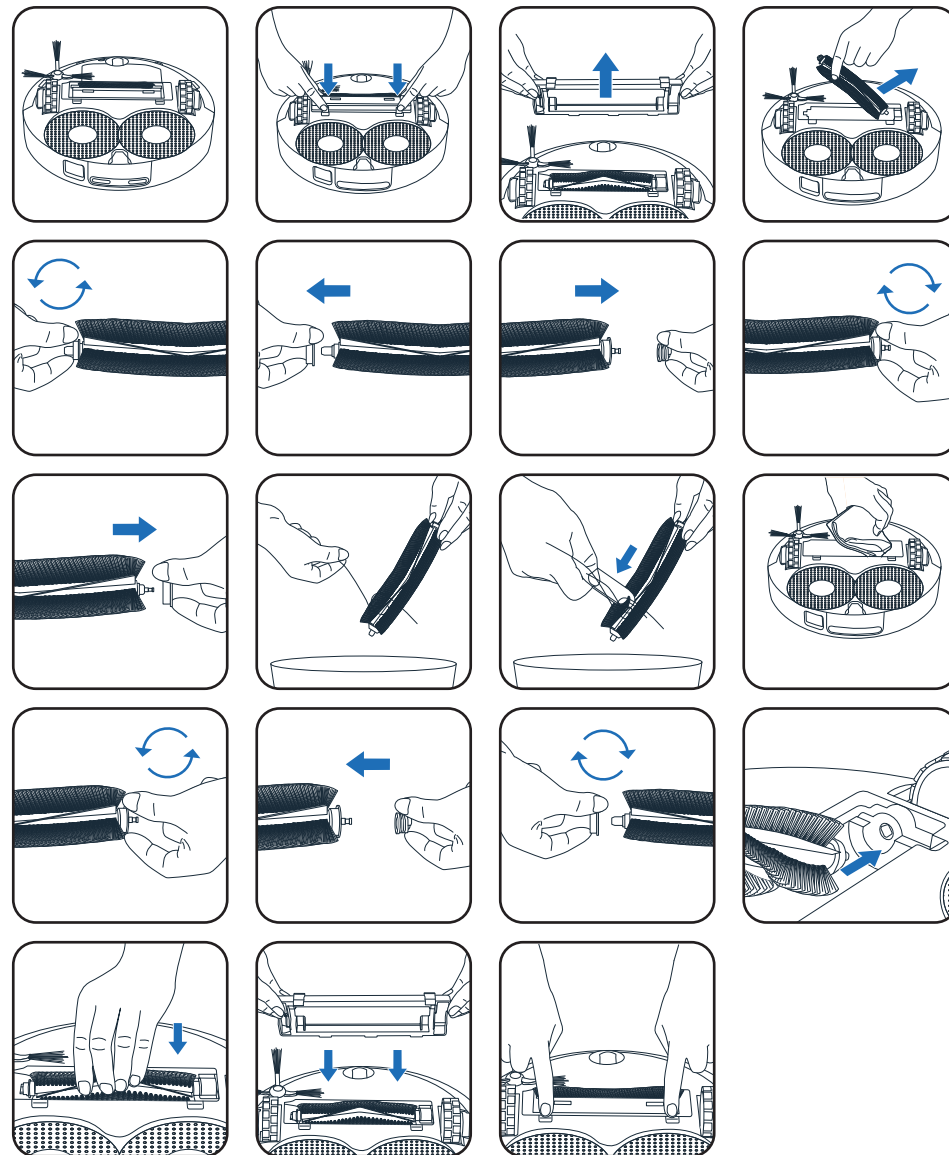

1. Sesalnik obrnite okoli.
2. Pritisnite zapahe pokrova krtače.
3. Potegnite, da ga odstranite.
4. Odstranite krtačo.
5. Obrnite in povlecite glavi krtače na levi in desni strani, da ju snamete.
6. Znebite se zavozlanih las. Za odstranjevanje zavozlanih las lahko uporabite orodje za čiščenje, ki je priloženo v embalaži.


7. S suho krpo očistite prostor za glavno krtačo in kanal za sesanje.
8. Ponovno namestite glavi krtače.
9. Ponovno namestite krtačo v sesalnik.
10. Znova namestite pokrov krtače.
11. Ko zaslišite klik, je pokrov pravilno nameščen.

Enkrat tedensko očistite stransko krtačo.

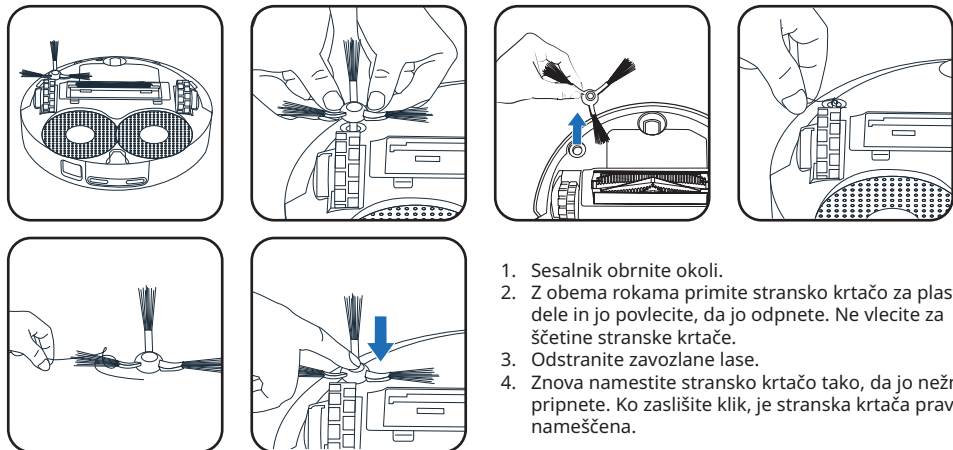


1. Sesalnik obrnite okoli.
2. Z obema rokama primite stransko krtačo za plastične dele in jo povlecite, da jo odpnete. Ne vlecite za ščetine stranske krtače.
3. Odstranite zavozlane lase.
4. Znova namestite stransko krtačo tako, da jo nežno pripnete. Ko zaslišite klik, je stranska krtača pravilno nameščena.

Enkrat tedensko očistite senzorje.

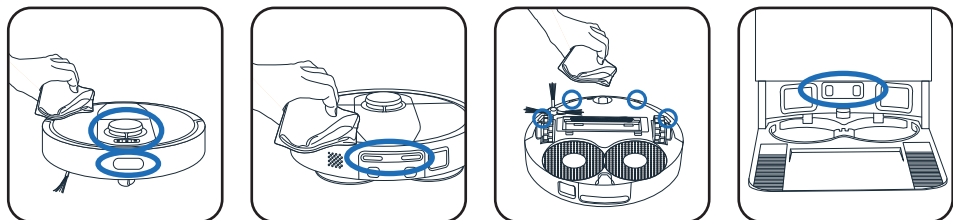


• S čisto, mehko in suho krpo obrišite senzorje sesalnika (spredaj, zgoraj, zadaj, ob strani in spodaj) ter gumbe na sesalniku, stike za polnjenje sesalnika in stike za polnjenje postaje.

Na 1-2 tedna očistite pladenj za samodejno pranje krp za brisanje.

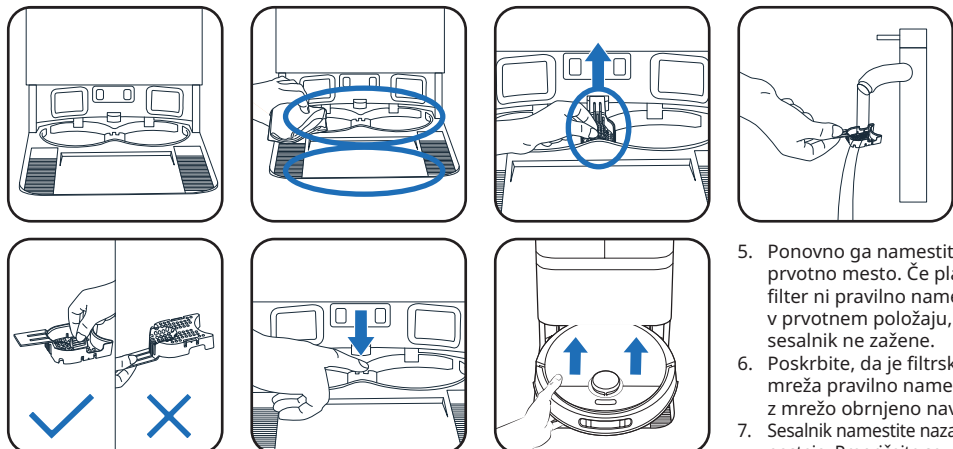

1. Za dostop do pladnja za samodejno pranje sesalnik odstranite iz postaje.
2. S krpo ali krtačo očistite morebitno umazanijo s pladnja za pranje.
3. Odstranite plastično cedilo.
4. Odstranite vso umazanijo in ga sperite pod vodo.


Na 2 tedna očistite posodo za čisto vodo.

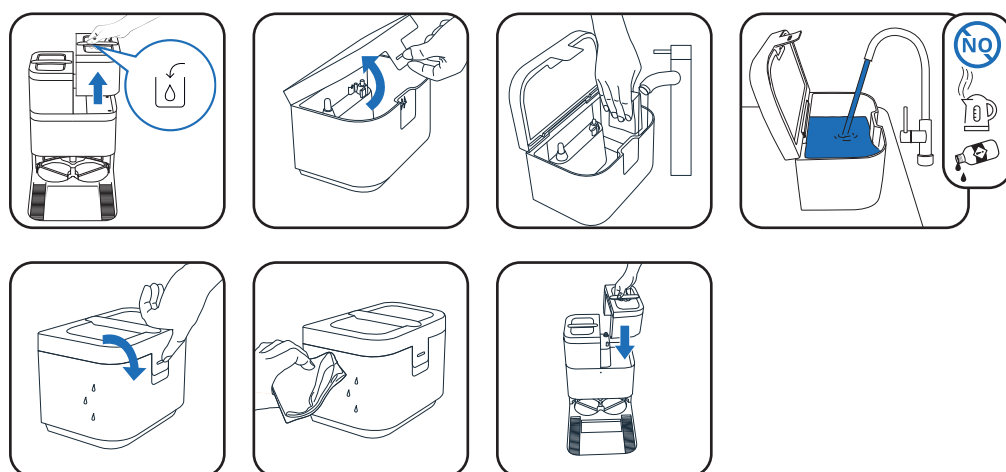

1. Izvlecite posodo za čisto vodo.
2. Odprite pokrov.
3. Posodo operite s čisto vodo. Ne uporabljajte prevelikega pritiska, da ne poškodujete sestavnih delov in plovcv v posodi.
4. Dodajte čisto vodo do oznake MAX. V posodo za vodo ne dodajajte vroče vode, saj lahko pride do poškodbe posode.

5. Ne dodajajte nobene snovi, kot so čistilna sredstva, eterična olja, detergent ali čistilna raztopina "Clean it", razen čiste vode, da preprečite poškodbe postaje in robota.
6. Zaprite pokrov.
7. Zunanost posode obrišite do suhega.
8. Posodo postavite nazaj na prvotno mesto v postaji.


Po izpraznitvi odpadne vode očistite posodo za odpadno vodo

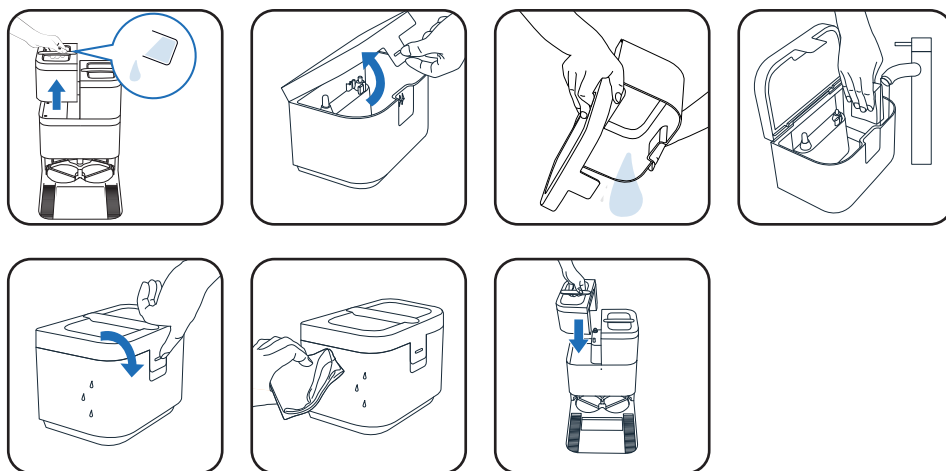

1. Ko je posoda za odpadno vodo polna, indikator postaje utripa rdeče. Izvlecite posodo za odpadno vodo.
2. Odprite pokrov.
3. Izlijte odpadno vodo.


4. Posodo operite s čisto vodo. Ne uporabljajte prevelikega pritiska, da ne poškodujete sestavnih delov in plovcv v posodi.
5. Zaprite pokrov.
6. Zunanost posode obrišite do suhega.
7. Posodo postavite nazaj na prvotno mesto v postaji.

Enkrat mesečno očistite kolesca.

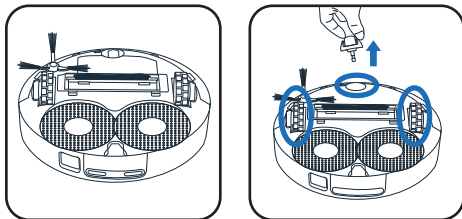


- Na kolesca se lahko zavozlajo lasje ali umazanija. Sesalnik obrnite okoli. Očistite kolesca tako, da odstranite zavozlane lase. Preden kolesce namestite nazaj, ga lahko odstranite in odstranite morebitno umazanijo.


Na 2-3 mesece (odvisno od dejanske uporabe) zamenjajte vrečko za prah

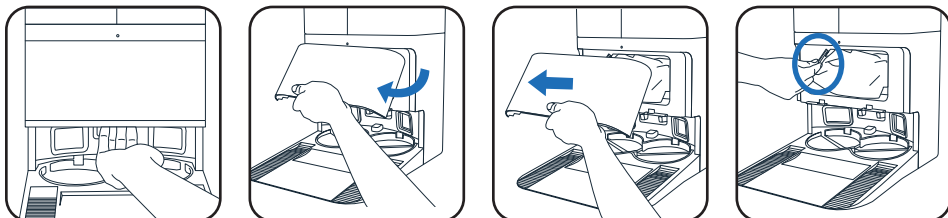


1. Prosimo, zamenjajte vrečko za prah, ko vas aplikacija na to opozori, ali jo lahko menjate vsakih 2-3 mesece glede na dejansko uporabo. Odstranite predal za vrečko za prah.

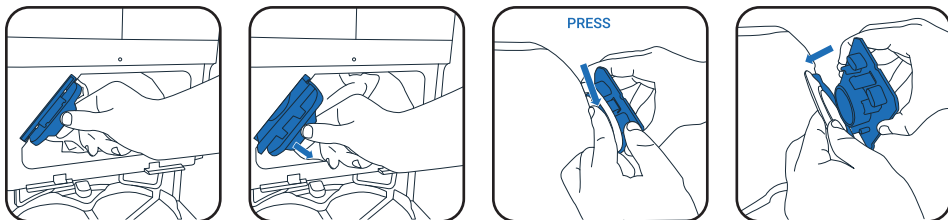


2. Primite priključek vrečke za prah za ročaj. Potegnite priključek proti sebi, da ga odstranite iz reže. Priložena vrečka bo pri tem odstranjena skupaj s priključkom. Če želite odstraniti vrečko iz priključka, pritisnite majhno plastično jeziček, da sprostite vrečko iz zareze v priključku. Vrečka se bo zlahka odstranila.

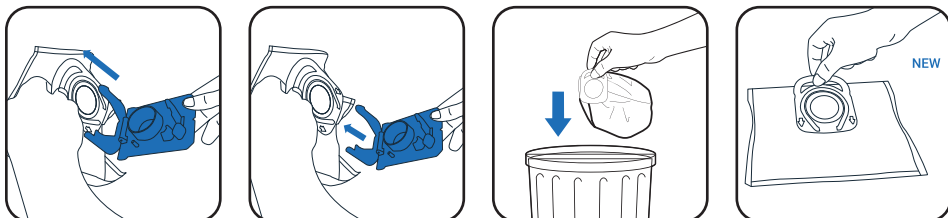


3. Vlečite rabljeno vrečko za ročaj naravnost iz priključka. Rabljeno vrečko odvrzite v smetnjak. Vzemite novo vrečko. Ne mečite adapter.

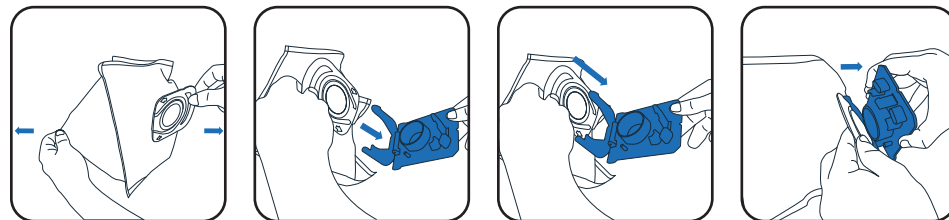

4. Rahlo napihnite vrečko, tako da nežno potegnete vsako stran vrečke. Vrečko primite za ročaj in jo gladko vstavite v režo priključka.

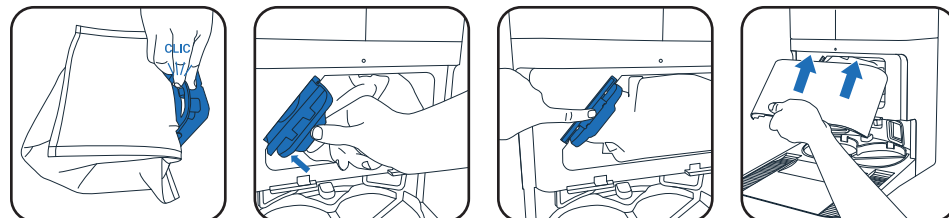

5. Ko je vrečka popolnoma vstavljena v režo priključka, jo prepognite proti priključku, dokler ne zaslišite klik zvoka. Potisnite priključek in vrečko nazaj v postajo. Prepričajte se, da je priključek popolnoma vstavljen s potiskanjem do konca.

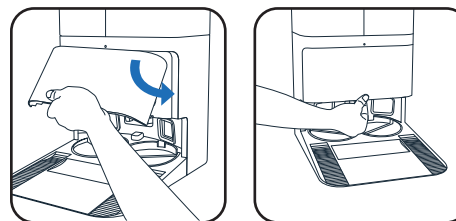

6. Pokrov prostora za vrečko vrnite na mesto in poskrbite, da se 4 zareze na vrhu pravilno prilegajo postaji.

8. Pogostost zamenjave sestavnih delov

Pogostost zamenjav je zgolj informativne narave. Če je sestavni del ali dodatek poškodovan, ga je treba takoj zamenjati, da se zagotovi učinkovito čiščenje. Sestavne dele in dodatke lahko kupite na: www.rowenta.com

Sestavni del	Pogostost čiščenja	Pogostost zamenjave
Posoda za prah	Po potrebi	Ni potrebno
Krpe	Po potrebi	Po 100 pranjih
Filter	Enkrat tedensko	Vsaj 6 mesecev
Glavna krtača	Enkrat tedensko	Po potrebi
Stranska krtača	Enkrat tedensko	Vsaj 6 mesecev
Senzorji	Enkrat tedensko	Ni potrebno
Pladenj za samodejno pranje krp za brisanje	Na 1-2 tedna	Ni potrebno
Posoda za čisto vodo	Na 2 tedna	Ni potrebno
Posoda za odpadno vodo	Po izpraznitvi odpadne vode	Ni potrebno
Kolesca	Enkrat mesečno	Ni potrebno
Vrečka za prah	Ni potrebno	Na 2-3 mesece (ko je poln, odvisno od dejanske uporabe)

Če želite podaljšati življenjsko dobo baterije, naj bo sesalnik vedno na postaji. Če sesalnika dlje časa ne boste uporabljali, povsem napolnite baterijo ter izklopite sesalnik tako, da pritisnete in 5 sekund zadržite gumb za zagon. Sesalnik shranite v hladnem in suhem prostoru.

10. Priporočeno in odsvetovano

- Sesalnik je opremljen s senzorji za preprečevanje padca, ki zaznavajo stopnice. Ko jih sesalnik zazna, spremeni smer. Za optimalno učinkovitost senzorjev za preprečevanje padca odstranite vse predmete (npr. čevlje) s stopnic. Če sesalnik uporabljate na dvignjenem območju, na rob postavite fizično oviro, da preprečite nenamerne padce.
- Sesalnika ne stresajte.
- Med čiščenjem ne poskušajte odstraniti krp za brisanje.
- Ne zavržite adapterja za vrečko za prah pri zamenjavi vrečke.
- Na sesalnik ne postavljajte vode ali mokre krpe.
- Ne polnite sesalnika, če so tla poplavljeni.
- Sesalnika ne potaplajte v vodo.
- Sesalnika ne uporabljajte na mokrih površinah ali površinah s stoječo vodo.
- Ne uporabljajte izdelka, če je kabel ali polnilnik poškodovan.
- Ne puščajte otrok brez nadzora, otrokom ne dovolite, da se igrajo s sesalnikom.
- Sesalnika ne uporabljajte zunaj doma.
- Sesalnika ne uporabljajte v pregretem okolju.
- Sesalnika ne uporabljajte, če je sobna temperatura pod 0 °C (32 °F) in nad 40 °C (104 °F).
- Pred uporabo sesalnika na tleh ne uporabljajte čistil.
- Za čiščenje sesalnika, filtra, postaje ali vrečke za prah ne uporabljajte čistilnih sredstev, aerosolnih čistil ali čistilnih razpršil.
- Sesalnika ne odvrzite v ogenj.
- Sesalnika ne uporabljajte za čiščenje razbitega stekla.
- Ne hodite in ne plezajte po sesalniku, ne premikajte ga z nogo.
- Ne dovolite otrokom ali hišnim ljubljencem, da se vozijo na sesalniku.
- Na sesalnik ne odlagajte predmetov.
- Sesalnika ne uporabljajte brez filtra, saj se lahko poškoduje.
- Preden napravo zavržete, odstranite baterijo ter jo odvrzite v skladu z lokalno zakonodajo in predpisi. Če imate vprašanja, se za pomoč obrnite na prodajalca izdelka.



11. Prekinite povezavo s sesalnikom in izbrišite osebne podatke

Pritisnite in 5 sekund zadržite gumb za domov in gumb za vklop, dokler ne zaslišite piska, da onemogočite modul Wi-Fi sesalnika. Sesalnik bo samodejno prekinil povezavo s telefonom. Omenjena 2 gumba bosta nekaj minut počasi utripala. Sesalnik bo samodejno prekinil povezavo s telefonom in usmerjevalnikom. Ko bo postopek zaključen, ga ni mogoče razveljaviti. Za ponovno seznanitev boste morali znova izvesti postopek seznanjanja. Za izbris osebnih podatkov, shranjenih v sesalniku, ga ponastavite. Pritisnite in 15 sekund zadržite gumb Domov, dokler ne zaslišite zvočnega signala.

Napaka	Rešitev
Sesalnika ni mogoče zagnati	<ul style="list-style-type: none"> • Prepričajte se, da je sesalnik priključen na električno napajanje. • Prepričajte se, da je baterija popolnoma napolnjena. • Prepričajte se, da je sesalnik vklopljen. Pritisnite in 5 sekund zadržite gumb za zagon, dokler se ne prižgejo lučke sesalnika. • Preverite, ali je posoda za prah pravilno nameščena.
Sesalnik nenadoma neha delovati	<ul style="list-style-type: none"> • Preverite, ali se je sesalnik zagodzil ali pa ga blokirajo ovire. • Preverite, ali je baterija premalo napolnjena. Napolnite akumulator aparata. • Če težava ni odpravljena, sesalnik izklopite tako, da pritisnete in 5 sekund zadržite gumb za zagon. Počakajte 30 sekund in ga vklopite tako, da pritisnete in 5 sekund zadržite gumb za zagon, da ga znova zaženete. • Naprava se morda pregreva: <ul style="list-style-type: none"> - Napravo izklopite in počakajte vsaj 1 uro, da se ohladi. - Če se naprava večkrat pregreje, se obrnite na pooblašeni servis.
Sesalnika ni mogoče polniti	<ul style="list-style-type: none"> • Prepričajte se, da je postaja pravilno priključena na napajanje. • Prepričajte se, da je sesalnik vklopljen. Pritisnite in 5 sekund zadržite gumb za zagon, dokler se ne prižgejo lučke sesalnika. • Preverite, ali indikator na sesalniku med polnjenjem utripa. • S suho krpo obrišite prah s stikov za polnjenje. • Prepričajte se, da sta sesalnik in postaja povezana prek stikov za polnjenje.
Sesalnik se ne more vrniti na postajo	<ul style="list-style-type: none"> • Odstranite predmete 0,5 m levo in desno od postaje ter 1,5 m pred njo. • Prepričajte se, da sesalnik začne čiščenje s postaje, ne da bi se nenormalno premikal. • Če je sesalnik blizu postaje, se lahko hitreje vrne. Če pa je postaja zelo oddaljena, sesalnik potrebuje več časa, da se vrne. Počakajte, da se vrne. • S suho krpo očistite stike za polnjenje.
Urnik čiščenja se ne izvede	<ul style="list-style-type: none"> • Prepričajte se, ali je sesalnik vklopljen. Pritisnite in 5 sekund zadržite gumb za zagon, dokler se ne prižgejo lučke sesalnika. • Preverite, ali je bil urnik čiščenja pravilno nastavljen v aplikaciji ob želenem času in ali je urnik čiščenja shranjen. • Preverite, ali je raven baterije prenizka, da bi lahko začel sesati. • Sesalnik ne začne načrtovanega čiščenja, če izvaja drugo opravilo. • Preverite, ali je posoda za prah pravilno nameščena.

Napaka	Rešitev
Med čiščenjem se sliši žvižganje ali pa je delovanje zelo glasno	<ul style="list-style-type: none"> Preverite, ali je sesalna odprtina blokirana. Izpraznite posodo za prah. Očistite filter. – Preverite, ali je filter moker zaradi vode ali druge tekočine na tleh. Filter pred uporabo posušite na zraku. Preverite, ali je posoda za prah pravilno nameščena. Preverite, ali glavno krtačo ali stransko krtačo blokira kakšen tujek, odstranite glavno ali stransko krtačo in jo očistite.
Osrednja krtača se ne vrti.	<ul style="list-style-type: none"> Preverite, ali glavno krtačo blokira kakšen tujek, odstranite glavno krtačo in jo očistite. Preverite, ali sta osrednja krtača in pokrov krtače pravilno nameščena.
Stranska krtača med čiščenjem pade s svojega mesta	<ul style="list-style-type: none"> Stranska krtača ni pravilno nameščena. Stranska krtača je pravilno nameščena, ko zaslišite zvok klika.
Krtače se ne morejo vrteti	<ul style="list-style-type: none"> Krpe za brisanje morda blokira tujek, zato ga odstranite. Krpe za brisanje niso pravilno nameščene. Krpe so pravilno nameščene, ko zaslišite zvok klika.
Nenormalno delovanje ali vidno puščanje sledi za sesanjem.	<ul style="list-style-type: none"> Senzorje previdno očistite s suho krpo. Izklopite sesalnik tako, da pritisnete in 5 sekund zadržite gumb za zagon, počakajte 30 sekund in ga vklopite tako, da pritisnete in 5 sekund zadržite gumb za zagon, da znova zaženete sesalnik.
Med mokrim čiščenjem se ne uporablja voda.	<ul style="list-style-type: none"> Prepričajte se, da je v posodi za čisto vodo postaje dovolj vode. Preverite, ali je posoda za čisto vodo pravilno nameščena. Preverite, ali je pogostost samodejnega vračanja za pranje krp za tla v aplikaciji nastavljena na zeleno raven.

Napaka	Rešitev
Sesalnik se ne more povezati v vaše brezžično omrežje	<ul style="list-style-type: none"> Zagotovite, da vaš brezžični usmerjevalnik podpira frekvenčni pas 2,4 GHz in standard 802.11 b/g/n, saj ta oprema ne podpira frekvenčnega pasu 5 GHz. Preverite, ali je samodejna ponovna povezava z domačim omrežjem Wi-Fi pravilna. Vklopite mobilne podatke svojega pametnega telefona. Ne uporabljajte omrežja VPN (navideznega zasebnega omrežja). Poskusite znova in preverite, ali ste izbrali pravilno omrežje Wi-Fi. Poskusite znova in preverite, ali ste vnesli pravilno geslo za Wi-Fi. Telefon imejte blizu sesalnika in postaje do konca postopka seznanjanja. Po več poskusih odklopite in znova priključite izdelek Ponastavite sesalnik ter pritisnite in 15 sekund zadržite gumb Domov. Pritisnite in 5 sekund zadržite gumb "DOMOV" in gumb za zagon, dokler lučki na obeh gumbih ne začneta utripati. Znova zaženite pametni telefon Če se pojavi opozorilno okno za internetno povezavo, ohranite povezavo s sesalnikom. Če se napaka ponovi, se obrnite na našo skupino za podporo (telefonska številka je odvisna od države vašega prebivališča, poiščite jo na letaku za pomoč v embalaži).
Zemljevid je izgubljen	<ul style="list-style-type: none"> Zemljevid se lahko izgubi, če je bil sesalnik med čiščenjem ročno premaknjen na drugo lokacijo ali če je bilo spremenjeno domače okolje (premaknjeno pohištvo). Znova zaženite izdelovanje zemljevida tako, da v aplikaciji zaženete novo raziskovanje ali novo sejo čiščenja s postaje.
Sesalnik se vrne na postajo, preden konča s čiščenjem	<ul style="list-style-type: none"> Raven baterije je morda prenizka za dokončanje čiščenja, sesalnik se bo vrnil na postajo za polnjenje. Ko je baterija polna, bo sesalnik nadaljeval s čiščenjem tam, kjer je končal čiščenje. Sesalnik morda ne more doseči določenih območij, ki so blokirana s pohištvo ali ovirami, ta območja pospravite, da bodo dostopna. Preverite prepovedana območja in območja brez brisanja, nastavljena v aplikaciji. Dodajte, spremenite ali izbršite območja glede na vaše potrebe.
Sesalnik se je zagozdil	<ul style="list-style-type: none"> Sesalnik se je morda zapletel, ročno odstranite blokirani predmet in ponovno zaženite sejo čiščenja s pritiskom na gumb za zagon. Sesalnik se je morda zagozdil pod pohištvo s podobno višino vhoda, v aplikaciji nastavite fizično oviro ali prepovedano območje. Zavrtite in pritisnite kolesca, da preverite, ali je zavrt ali zataknen kakšen tujek ter ga odstranite.
Postaja ne čisti krp za brisanje.	<ul style="list-style-type: none"> V posodi za čisto vodo ni dovolj vode. Dolijte vodo v posodo za čisto vodo. Posoda za odpadno vodo je polna, izpraznite jo. Očistite odprtine filtra za odpadno vodo.

Napaka	Rešitev
Ni mogoče vstaviti vrečke za prah v predal za vrečko.	<ul style="list-style-type: none">• Prepričajte se, da imate adapter za vrečko za prah.• Prepričajte se, da je vrečka za prah popolnoma vstavljena v režo adapterja, pritisnite jo ob adapter, dokler ne zaslišite KLIK. Pomaknite adapter in vrečko v postajo.• Prepričajte se, da je adapter popolnoma vstavljen, tako da ga potisnete do konca.