



Washing Machine

User Manual



AWGB 1012S/PRO

2820533716/ EN/ / 03/10/2025 11:43



Please read this user manual first!

Dear Customer,

Thank you for choosing Beko product.

Please register your product at www.register10.eu.






We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product.

Follow all warnings and information in the user manual. Thus, you protect yourself and your product against possible dangers.

Keep the user manual. If you hand over the product to someone else, provide the user manual as well. Warranty terms, usage and troubleshooting methods of your product are in user manual.

Symbols and Definitions

The following symbols are used in the user manual:

	Danger that could result in death or injury.
	Important information or useful hints about usage.
	Read the user manual.
	Recyclable materials.
	Hot surface warning.
WARNING	Danger that may result in property damage to the product or its environment.





1 Safety Instructions

Important to Be Read and Observe

Original instruction for use.

Before using the appliance, read these safety instructions. Keep them nearby for future reference. These instructions and the appliance itself provide important safety warnings, to be observed at all times. The manufacturer declines any liability for failure to observe these safety instructions, for inappropriate use other appliance or incorrect setting of controls. The warranty conditions are specified in the document supplied with the appliance.

- Keep very young children (0-3 years) away from the appliance. Keep young children (3-8 years) away from the appliance unless they are continuously supervised. Children aged 8 and over, as well as individuals with reduced physical, sensory or mental capabilities or individuals with lack of knowledge and experience can use the appliance only under supervision or after receiving clear instructions on safe use and understanding the possible risks. Children must not play with the appliance. Children must not perform clean-

ing and maintenance tasks without supervision. Do not force the door open or use it as a step.

- The A-weighted emission sound pressure level is below 70 dB.



1.1 Permitted Use

- The appliance is not intended to be operated by means of an external switching device, such as a timer, or separate remote controlled system.
- This appliance is intended for household use and similar applications listed as follows:
 - Staff kitchens in shops, offices, and other work environments.
 - Farmhouses
 - Hotels, motels, bed & breakfast and other residential environments
 - Communal areas in apartment buildings or laundromats
- Do not load the appliance above the maximum capacity (kilogram of dry cloth) indicated in the programme table.
- This product is designed for commercial use.

- Do not use the device outdoors.
- Do not use any solvents (e.g. turpentine, benzene), detergents containing solvents, scouring powder, glass or general purpose cleaners, or flammable fluids. Do not machine wash fabrics that have been treated with solvents or flammable liquids.
- This product is designed for use at altitudes up to 2000 meters above sea level.
- Move the appliance without lifting it by the worktop or top lid.
- Installation, including water supply (if any) and electrical connections and repairs must be carried out by a qualified technician.

1.2 Installation

- This appliance requires two or more people to handle and install to prevent injuries. Wear protective gloves during unpacking and installation to avoid cuts.
- Before stacking a dryer on top of your washing machine, contact our After-Sales Service or your specialist dealer to verify whether this is possible. This is only possible if the dryer is attached to the washing machine by means of appropriate stacking kit available through our After-Sales Service or your specialist dealer.
- Do not install the appliance in places where it may be exposed to extreme conditions such as poor ventilation, temperatures below 5 °C or above 35 °C.
- Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Keep children away from the installation site.
- After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-Sales Service.
- After installing the appliance, keep the packaging waste (plastic, styrofoam, etc.) out of the reach of children to avoid the risk of suffocation.
- Before any installation operation, disconnect the appliance from the power supply to avoid electric shock.
- During installation, ensure the power cable is not damaged to prevent fire or electric shock.

- Do not operate the appliance until installation is complete.
- When installing the appliance, make sure that the four feet are stable and resting on the floor, adjusting them as required. Check that the appliance is perfectly level using a spirit level.
- When installing the appliance on wood or floating floors (certain parquet and laminate types), place a 60 x 60 x 3 cm (minimum) plywood sheet under the appliance to provide stability.
- Connect the water inlet hose(s) to the water supply in accordance with the regulations of your local water company.
- For cold fill only models: do not connect to the hot water supply.
- For models with hot fill: the hot water inlet temperature must not exceed 60 °C.
- The washing machine is equipped with transport bolts to prevent damage to the interior during transport. You must remove these transport bolts before using the machine. After removing them, close the openings using the plastic cover provided with the machine.
- After installation, wait a few hours before operating the appliance so that it acclimates to the environmental conditions of the room.
- Make sure that the ventilation openings in the base of your washing machine (if available on your model) are not obstructed by carpet or other material.
- Use only new hoses to connect the appliance to the water supply. Do not reuse old hose-sets.
- The supply water pressure must be in the 0.1-1 MPa range.
- Do not repair or replace any part of the appliance unless specifically stated in the user manual. Use only authorized After-Sales Service. Self or non-professional repair may lead to dangerous incidents resulting in life or health threatening and/or significant property damage.
- The spare parts for the household washing machines will be available for 10 years after placing the last unit on the market as dictated by the Ecodesign for Sustainable Products Regulation.

1.3 Electrical Warnings

- To disconnect the appliance from the power source:
 - Unplug it (if the plug is accessible), or
 - use a multi-pole switch installed upstream of the socket in accordance with local wiring rules.
- Ensure the appliance is earthed according to national electrical safety standards.
- Do not use extension leads, multiple sockets or adapters. The electrical components must not be accessible to the user after installation. Do not use the appliance when you are wet or barefoot. Do not operate the appliance if the power cord or plug is damaged, if the appliance is not working properly, or if it has been damaged or dropped.

- If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid possible hazards and the risk of electric shock.

1.4 Cleaning and Maintenance

- Before performing any maintenance, switch off and disconnect the appliance from the power supply.
- Wear protective gloves and safety shoes to avoid injury during maintenance.
- Handle the appliance with two or more people to prevent strain or injury.
- Do not use steam cleaning equipment on the appliance to prevent electric shock.
- Non-professional repairs or maintenance void the warranty and may pose safety risks.

2 Important Instructions for Environment

2.1 Compliance with WEEE Directive



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do

not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

2.2 Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment

Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

3 Technical Specifications

Nominal Capacity (kg)	10
-----------------------	----

4 Installation



Please read the "Safety Instructions" section first!



Your product automatically detects the amount of laundry placed inside when selecting a programme.

While installing the product, before the first use, calibration should be done to ensure that the laundry amount is detected in the most accurate way.

To do this, select the Drum Cleaning* programme and cancel the spin function. Start the programme without laundry. Wait for the programme to finish, which will take about 15 minutes.

*The programme name may vary depending on the model. For the appropriate programme selection, review the programme descriptions section.


- Please contact the nearest Authorised Service for the installation of the product.
- Make sure that the installation and electrical connections of the product are performed by authorised service agent. Manufacturer shall not be held responsible for damages caused by operations performed by unauthorised persons.
- Preparation of the location and electrical, tap water and wastewater installations at the place of installation is under customer's responsibility.
- Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched, or crushed while pushing the product into its place after installation or cleaning procedures.
- Prior to installation, visually check if the product has any defects on it. Do not have the product installed if it is damaged. Damaged products cause risks for your safety.

5 Operating the Product



Please read the "Safety Instructions" section first!

5.1 Control Panel

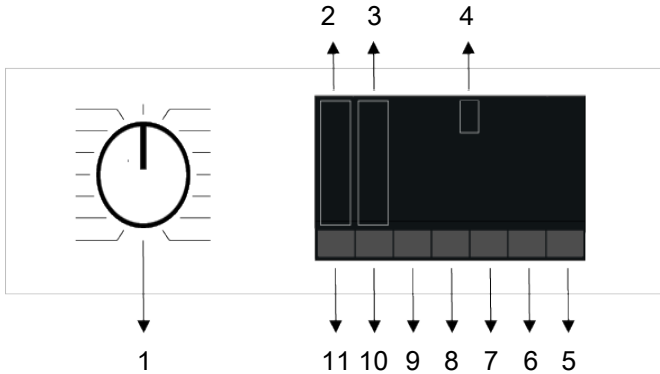

- | | |
|-------------------------------|--------------------------------------|
| 1 Programme Selection Button | 2 Temperature Level Indicator Lights |
| 3 Spin Level Indicator Lights | 4 Display |
| 5 Start/Pause Button | 6 End Time Setting Button |
| 7 Auxiliary Function Button 3 | 8 Auxiliary Function Button 2 |
| 9 Auxiliary Function Button 1 | 10 Spin Speed Adjustment Button |
| 11 Temperature Setting Button | |

5.2 Programme Selection


1. According to the "Programme table", determine the programme suitable for the type, quantity and dirt level of the laundry.



Programs are limited to the highest spin speed suitable for the fabric type.


When choosing the program you will use, always take into consideration the fabric type, color, degree of soiling and allowed water temperature.

2. Select the desired program using the Program Selection button.

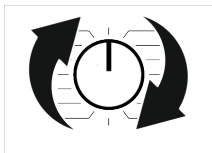

5.3 Starting the Program

1. Press the Start/Pause button 1 second to start the program.

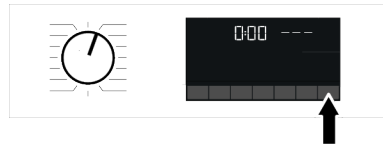

2. The Start/Pause button's dim light now becomes steady, indicating that the program has started.
3. The loading door is locked. After the loading door is locked, the door lock symbol appears on the screen.
4. The program follow-up indicator lights on the screen show the current program step.

5.4 Cancelling the Programme

The programme is cancelled when programme selection knob is turned to a different programme or product is turned off and on again using the programme selection knob.



If you turn the programme selection knob when the Child Lock is enabled, the programme will not be cancelled. You should cancel the Child Lock first.

If you want to open the loading door after you have cancelled the programme but if it is not possible to open the loading door since the water level in the product is above the loading door baseline, then turn the Programme Selection knob to Pump+Spin programme and drain the water in the product.

5.5 End of Programme

End symbol appears on the display when the programme is completed.

If you do not press any button for 10 minutes, the product will switch to OFF mode. Display and all indicators are turned off.

Completed programme steps will be displayed if you press On/Off button.

6 Troubleshooting



Read the "Safety Instructions" section first!

The program does not start after closing the machine door.

- The Start / Pause button may not have been pressed. >>> Press the Start / Pause button.
- In case of overload, the door may be difficult to close. >>> Reduce the laundry and make sure the door closes properly.

The program cannot be started or the program selection cannot be made.

- The product may have switched to self-protection due to infrastructure problems (mains voltage, water pressure, etc.). >>> Depending on the product model, to cancel the program, select another program by turning the Program Selection knob or pressing and holding the On/Off button for 3 seconds. The previous program will be canceled. See.Cancelling the Programme [▶ 9]

The product does not absorb water.

- The tap may be closed. >>> Open the taps.
- The water inlet hose may be kinked. >>> Straighten the hose.
- The water inlet filter may be clogged. >>> Clean the filter.
- The loading door may not be closed. >>> Close the door.

The product does not drain water.

- The water drain hose may be clogged or kinked. >>> Clean or straighten the hose.
- The pump filter may be clogged. >>> Clean the pump filter.

The product vibrates or makes noise.

- The product may be standing unstable. >>> Balance the product by adjusting its feet.
- A hard object may have gotten stuck in the pump filter. >>> Clean the pump filter.
- Transportation safety bolts may not have been removed. >>> Remove the transportation safety bolts.

- The amount of laundry in the product may be less. >>> Load more laundry into the product.
- Excessive laundry may have been loaded into the product. >>> Remove some of the laundry inside the product or straighten the laundry with your hand and distribute it evenly inside the product.
- The product may be resting on a hard surface. >>> Check that the product is not resting on anything.

Water is coming from the bottom of the product.

- The water drain hose may be clogged or kinked. >>> Clean or straighten the hose.
- The pump filter may be clogged. >>> Clean the pump filter.

No water is visible in the product during washing.

- Water is in the invisible part of the product. >>> This is not a malfunction.

The loading door does not open.

- The door lock is activated due to the water level in the product. >>> Drain the water by running the Pump or Spin program.
- The product may be heating the water or in the spinning phase. >>> Wait for the program to finish.
- The front cover may remain attached due to pressure on it. >>> The front cover is released from its attached position and opened by pushing and pulling the handle.
- In cases where there is no electricity, the loading door of the product will not open. >>> To open the loading door of the product, open the pump filter cover and pull down the loading door emergency release lever located behind it. See>Loading Door Lock

The program time does not count down. (*)

- The laundry may have created an imbalance in the product. >>> Due to the unbalanced distribution of the laundry inside the product, the automatic unbalanced load detection system may have been activated.

The product does not pass the squeezing step. (*)

- The laundry may have created an imbalance in the product. >>> Due to the unbalanced distribution of the laundry inside the product, the automatic unbalanced load detection system may have been activated.
- The spin cycle may not have been completed because the water inside the product could not be drained. >>> Check the filter and drain hose.
- Excessive foam may have formed due to excessive detergent use and the automatic foam dampening system may have been activated. >>> Use the recommended amount of detergent.

Suds are overflowing from the detergent drawer.

- Too much detergent may have been used. >>> Mix 1 tablespoon of softener with ½ liter of water and pour it into the main wash compartment of the detergent drawer. >>> Add the appropriate amount of detergent to the product according to the program and maximum load stated in the "Programme table" section. When using additional chemicals (stain removers, bleach, etc.), reduce the amount of detergent.

(*) When the laundry is not well distributed inside the product, the product does not proceed to the spinning step to prevent damage to itself and the environment. Arrange the laundry and spin again.

7 DISCLAIMER

Some (simple) failures can be adequately handled by the end-user without any safety issue or unsafe use arising, provided that

they are carried out within the limits and in accordance with the following instructions (see the "Self-Repair" section).

Therefore, unless otherwise authorized in the "Self-Repair" section below, repairs shall be addressed to registered professional repairers in order to avoid safety issues. A registered professional repairer is a professional repairer that has been granted access to the instructions and spare parts list of this product by the manufacturer according to the methods described in legislative acts pursuant to Directive 2009/125/EC.

However, only the service agent (i.e. authorized professional repairers) that you can reach through the phone number given in the user manual/warranty card or through your authorized dealer may provide service under the guarantee terms. Therefore, please be advised that repairs by professional repairers (who are not authorized by Beko) shall void the guarantee.

Self-Repair

Self-repair can be done by the end-user with regard exclusively to the following spare parts: door, door hinge and seals, other seals, door locking assembly and plastic peripherals such as detergent dispensers (an updated list is also available in support.beko.com as of 1st of March 2021) Moreover, to ensure product safety and to prevent risk of serious injury, the mentioned self-repair shall be done following the instructions in the user manual for self-repair or which are available in support.beko.com For your safety, unplug the product before attempting any self-repair.

Repair and repair attempts by end-users for parts not included in such list and/or not following the instructions in the user manuals for self-repair or which are available in support.beko.com , might give raise to safety issues not attributable to support.beko.com , and will void the warranty of the product.

Therefore, it is highly recommended that end-users refrain from the attempt to carry out repairs falling outside the mentioned list of spare parts, contacting in such cases authorized professional repairers or registered professional repairers. On the contrary, such attempts by end-users may cause safety issues and damage the product and subsequently cause fire, flood, electrocution and serious personal injury to occur.

By way of example, but not limited to, the following repairs must be addressed to authorized professional repairers or registered professional repairers: motor, pump assembly, main board, motor board, display board, heaters etc.

The manufacturer/seller cannot be held liable in any case where end-users do not comply with the above

The spare part availability of the washing machine or washer-dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the washing machine or washer-dryer properly.

