



# AFTERGLOW™ WIRELESS

## QUICK START GUIDE

### IMPORTANT READ BEFORE USING

PLATFORM COMPATIBILITY:  
NINTENDO SWITCH™ 2  
NINTENDO SWITCH™ OLED  
NINTENDO SWITCH™ LITE

CERTIFICATION MODEL:  
CWBB0029

### SETUP

#### 1. Pairing the Controller

- Turn on your Nintendo Switch™ 2 device and press any button on the controller.
- If your controller does not automatically connect, it will need to be paired with the device.
- Using the Joy-Con™ controllers, navigate to Controllers > Change Grip/Order.
- Now, using your controller, press and hold the sync button (at the top of the controller by the charging port) for 3 seconds until it pairs and the player indicator light at the bottom is solid.

 
**Tip:** To unpair the controller from the Nintendo Switch™ 2, hold down the sync button (located at the top of the controller) for at least 1 second.



#### 2. Re-connecting the Controller

- If the controller is not connecting with the device, but has already been paired, simply go into Controllers > Change Grip/Order.
- When prompted, press L and R on your controller to connect.

#### 3. Charging the Controller


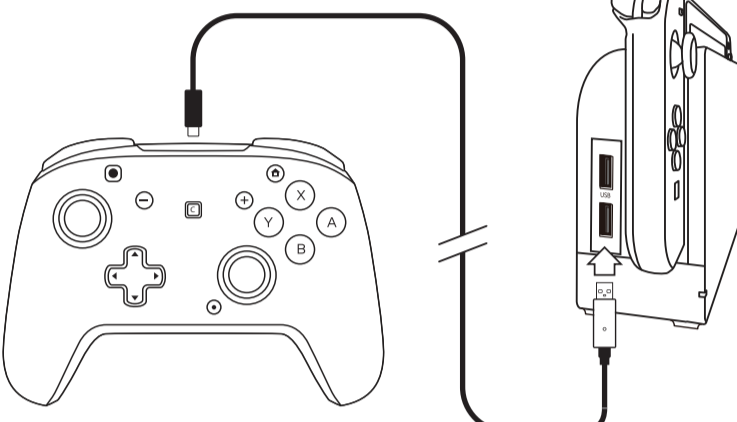


- When the controller is low on battery, the "function" button's LED (located at the bottom center of the controller) will blink RED every 30 seconds.
- Using the included USB-C cable, connect the controller to one of the USB ports on the Nintendo Switch™ 2 dock.
- While charging, the "function" button's LED will pulse RED. When the controller is fully charged, the LED will turn WHITE.

**Note:** To prevent the controller battery from completely draining out, please charge the controller every 3 months even if it's not in use.

#### 4. Programming the Back Buttons

  
- To program the back buttons, hold the "function" button and press the button you'd like to map a control to. Once the LED is flashing, press any button on the controller to map that button's function to the back. The LED will blink quickly 3 times, indicating successful programming.
- To clear a mapped function or disable the back buttons completely, hold down the "function" button and double press any back button.

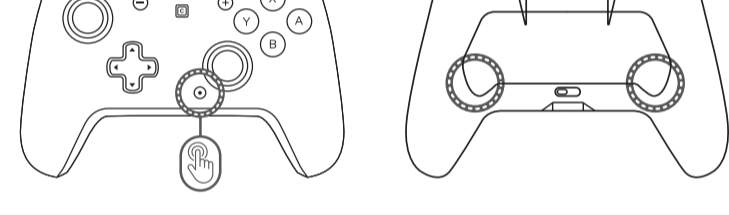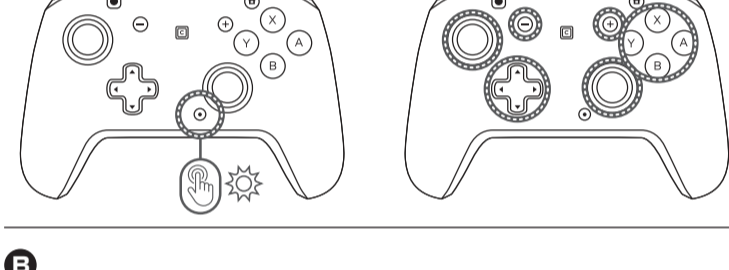

#### 5. Light Modes


To cycle through the light modes, hold down the function button and press either L or R.

 - Mode 1** - The LEDs are on and set to your color.
- Mode 2** - Toe LEDs fade in and out to set color.
- Mode 3** - The LEDs will cycle through all colors.
- Mode 4** - The LEDs will react to the movement of the sticks.

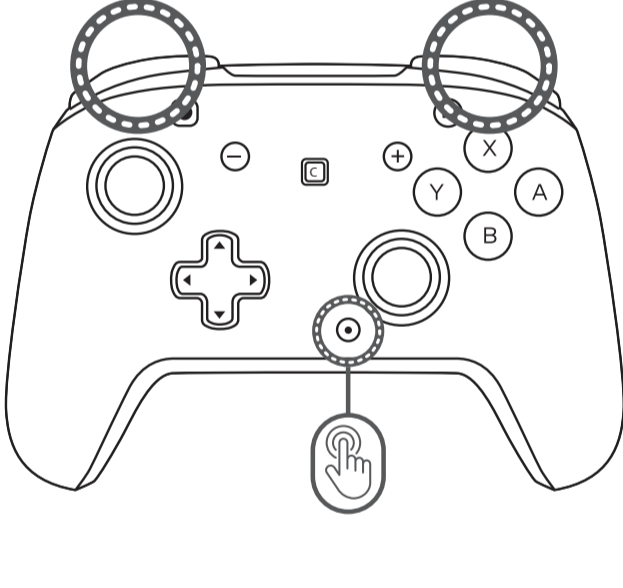


#### 6. Adjusting the Colors of the Lights

 - Hold down the "function" button and use the Left/Right button on the D-pad to change the LED's color.
- Once you find the color you'd like, save the setting by releasing the "function" button.
- For white, hold down the "function" button and click in the left analog stick.
- To turn the lighting off, hold down the "function" button and Left/Right button, cycle to 0 brightness and release the buttons.

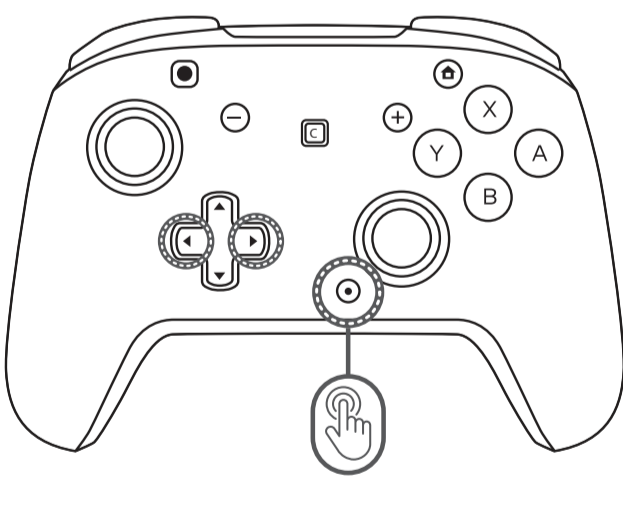

#### 7. Adjusting the Brightness of the Lights

 - To adjust the brightness, hold down the "function" button and press the ZR button to increase brightness, and ZL to decrease it.
- To turn off the lights completely, hold down the "function" button and press the ZL button until it cycles to 0% brightness

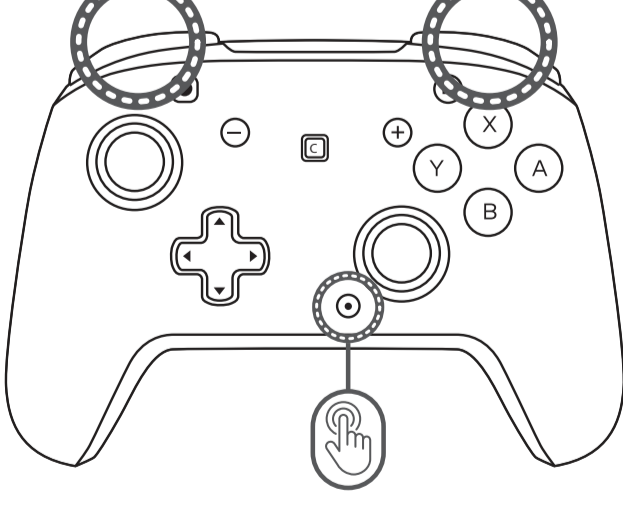

## TURTLE BEACH™

Any questions?

[www.turtlebeach.com/support](http://www.turtlebeach.com/support)

Please register your product to receive important updates.

[www.turtlebeach.com/productregistration](http://www.turtlebeach.com/productregistration)

For warranty, visit:

[www.turtlebeach.com/warranty](http://www.turtlebeach.com/warranty)