

Garett Kids Essa 2 AI 4G



User manual

CONTENTS

SAFETY RULES	3
PRODUCT DESCRIPTION	4
INSTALLATION	5
NANO SIM CARD REQUIREMENTS	5
NANO SIM CARD INSTALLATION	6
OPERATION	6
CHARGING	8
FIRST START-UP	9
INSTALLING THE GARETT TRACKER APP	10
REGISTERING IN THE APP	11
GARETT TRACKER APP	13
MAIN MENU	19
TROUBLESHOOTING	25
TECHNICAL SPECIFICATIONS	27
WARRANTY/CLAIMS	28

SAFETY RULES

Before use, read this user manual carefully and keep it for further reference. The manufacturer shall bear no liability for any damage/injuries caused by improper use. Depending on the smartwatch batch, certain functions may differ from the functions described in this user manual.

- Using this device in the vicinity of medical devices may disrupt their operation. Users should pay special attention when using the smartwatch in the vicinity of medical devices such as pacemakers, hearing aids and other electronic medical devices.
- Do not dispose of the device in fire. There is a risk of battery explosion and resulting threat to life and health.
- Protect the device from heat sources and direct sunlight.
- Do not store the device in damp places or high temperatures, because it may cause electric shock or fire.
- The device is not resistant to long-term immersion in water.
- Do not swim or dive while wearing the device.
- In case of failure/damage, please stop using the product and contact the Garrett service centre. Any attempts to make your own repairs may damage the device and result in invalidation of the warranty.
- The device should only be cleaned with a soft, slightly damp cloth. Do not use strong detergents or any other stimulants to clean the product.

i Do not swim while wearing the device. The IP67 standard does not guarantee that the smartwatch will be waterproof while swimming. The forces acting on the device during swimming may cause it to become unsealed and damaged.

PRODUCT DESCRIPTION



- 1 Touch screen
- 2 Function button
(on/off/wake up/sleep/back/SOS)
- 3 Camera/video camera
- 4 Nano SIM Card slot
- 5 Set of measuring sensors
- 6 Magnetic charging port
- 7 Removable strap

INSTALLATION

Put the watch on your wrist and adjust the strap length so as to ensure the device strap is not too loose.

NANO SIM CARD REQUIREMENTS

 
1. The device requires the installation of a **Nano SIM** card.
2. The SIM card **must** meet the following requirements:
 - The card **must be active** (if it is a new card, you will need to activate it in a mobile phone by making an outgoing call),
 - The card **must be topped up** (applies to prepaid cards),
 - The card **cannot have an active PIN code** (to check whether the card has an active PIN lock, install it in a mobile phone and check whether a PIN code is required when starting up the phone - if so, the PIN lock is active and will need to be disabled in the phone settings or by contacting the operator),
 - The card **must support 2G/3G/4G modes, have an active internet service and caller ID function**;

i SIM cards offered by operators as data-only, e.g. those designed for tablets, may not function properly in the device.

Since the device uses an internet connection, we recommend purchasing an internet package from the operator to avoid additional costs. A 1 GB/month package is sufficient. The costs of internet connection, voice calls and text messages are specified in the price list of your mobile operator.

NANO SIM CARD INSTALLATION

1. First, turn the watch so that the buttons are on the left side.
2. Eject the **Nano SIM** card tray located on the right side of the watch.
3. Place the Nano SIM card on the tray, following the diagram shown in the image, making sure **the card chip faces the back cover of the watch**, and **the notched corner aligns with the slot**.
4. Insert the tray into the watch, ensuring proper alignment and correct positioning of the Nano SIM card.



Install the Nano SIM card when the device is turned off.



OPERATION

Switching ON/OFF



To start the device, press and hold the **function button** for about 5 seconds.

In case the smartwatch does not start, try to charge it. When an animation appears on the watch screen, charging has started.

After start-up



The smartwatch is operated using a **touch screen** and **function button**.

Dial change



On the main screen, **touch it and hold** to display the **dial change menu** of the smartwatch. **By sliding it to the right/left**, choose a dial and then confirm your choice **by clicking** any space on the screen.

Navigation



Swipe left the home screen to access the **main menu**. By touching the screen you will enter the selected function. After entering the function, moving to the right or pressing the **function button** allows you to return to the previous screen.



Swipe right on the home screen to access the **quick menu**. Allows you to preview and select recently used smartwatch functions.



 
Swipe down from the right side of the home screen to access the **settings bar**. It allows you to preview **selected smartwatch features**, and when swiped from the left side, it **previews recent notifications**.



Swipe up on the home screen or menu to access **widgets**.

CHARGING

1. The smartwatch is charged using the **magnetic cable** supplied with the device.
2. Attach the end of the magnetic cable so **that the contacts of the watch touch the contacts of the charging cable**. Then connect the other end of the cable to the USB port of a computer or a USB power adapter. **When it is connected properly, the charging animation will appear on the watch screen.**



ⓘ If there is no animation, make sure the watch is properly connected. When the battery is completely discharged, the animation may appear after several minutes. Before switching on the watch for the first time, it is recommended to charge it for about 2 hours.

**The charging voltage should not exceed 5V.
The recommended maximum charging current is 1A.**

FIRST START-UP

1. When the **Nano SIM card** is installed **correctly** in the watch and meets all the requirements described above, start the device by **pressing and holding the function button** for approximately 5 seconds.


 - internet connection

 - GSM coverage

 - WiFi coverage

 69% - battery level

2. After starting the watch, the **home screen** will appear, displaying the time and date. **Swiping down** on the main screen or menu will display: **the internet connection, GSM coverage, WiFi signal, and battery level.**

3. Wait until you see **GSM coverage (icon - )** and **internet connection (highlighted icon - **4G**)** They are necessary for further configuration of the device. After a minute, and if these values do not appear, make sure that the **SIM card meets all the requirements described above** and that **the watch is in a place where it can establish network contact**. You should also turn off (**Settings>Turn off**) and restart the watch. If you have **GSM coverage** and still no **internet connection** is available (**no **4G** icon illuminated**), this could mean that the **APN** is not configured correctly, which is done through the watch settings, described further in the **TROUBLESHOOTING** section.

4. When the **internet connection** is active, proceed to the next step, i.e. **installing the Garrett Tracker app on your phone**. The main menu of the smartwatch is described later in the manual. The device will be fully functional after **registration and configuration** of the watch via the **Garrett Tracker app**.

INSTALLING THE GARETT TRACKER APP



The smartwatch works with your smartphone using the **Garett Tracker** app. Before use, you must first download the app from the Google Play Store or the AppStore and install it on your phone. You can search for the app by entering the name "**Garett Tracker**" in the store search engine or by scanning the relevant QR code provided below.



i Remember to grant the app the required consents and permissions before registration so that it works properly. If you refuse, selected functions of the app may not work properly or will be unavailable.


REGISTERING IN THE APP

- 1.Launch the **Garett Tracker** app.
- 2.After launching the app, a **login screen** will be displayed, where you can log in to your account (**if already created**), **register** a new account or change the app language.
- 3.To register a new account, click the **Registration** option.
- 4.In the first field, enter your **e-mail address** that will serve as your **login** to the app.
- 5.Then **retype the verification code** from the image generated on the right.
- 6.In the last field, enter your **password** which, together with the e-mail address, will be used to **log in** to the app. **The password can consist of 8 - 16 characters. Password can only consist of numbers and letters. Special characters (e.g. @, _, \$) are not allowed.**
- 7.After filling in all the details, click **Registration**.

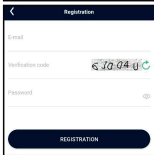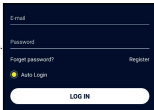

i Please remember or note down the e-mail address and password used to register the watch, because the account to which the device was first assigned is the administrator account. Re-registration will be possible only after obtaining permission from the administrator or after contacting our Technical Support Department: contact@garett.eu

8. Then press the **Add Device** button to add the watch to the previously created account.


9. On the next screen, scan the **QR code** using the button  from the sticker on the back of the watch (**REG CODE**) or in the watch settings. The code can be also entered manually.

10. Enter the **device name**, and it will be displayed as the name of the device associated with your account.







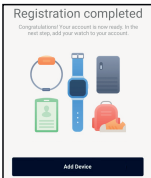


11. The next step is to choose your **relationship** with the user of the smartwatch.

12. Optionally, enter the **phone number** of the device, which will facilitate communication.

 
13. After filling in all the details, click **OK**, and the device and **Garett Tracker** app will be fully functional.







 If you encounter any issues with registering your device, please contact our Technical Support Department: contact@garett.eu


-  - **Chat:** The ability to send short voice messages (**max. 15 seconds**), short text messages (**max. 30 characters**) and photos to the watch
-  - **GEO-fence:** This function lets you define the area in which the watch user may move around. The app will inform you when the user crosses the geofence. To define the area, **click +** and then select any location on the map – this will be the **centre of the geofence**. Enter the name and radius of the area (**max. 2 km**).
-  - **Locate:** Clicking on this icon refreshes the data on the current location of the watch.
-  - **History:** Displays the route travelled by the user of the watch from the previous days.
-  - **Pop-up menu:** The ability to display and configure selected watch functions:
 -  - **Whitelist:** Incoming call filtering – it means that only the numbers on the Whitelist and that have been previously saved in the phone book will be able to get through to the watch.
 -  - **Remote camera:** Take a photo using the watch camera and send it to the app.
 -  - **Activity:** Configuration and display of the activities performed by the watch user, up to several days back.
 -  - **Video chat:** The ability to make video calls between the administrator and the associated watch.


Due to the large amount of data transmitted during a video call, a high-bandwidth internet connection is required. LTE connection is recommended. In locations with poor mobile network coverage, such as areas outside cities or towns, shopping malls or underground car parks, making video calls may not be possible, or the calls may be of poor quality with interruptions in video transmission.




-  - **Device lock** The ability to restrict the functionalities of the watch to SOS calls only.
-  - **Alarms:** View and configure the alarms active on the device (max. 3).
-  - **Notifications:** History of recent notifications, e.g. SOS calls, low battery.
-  - **Rewards:** Reward system – each reward is one heart. The total number of rewards is displayed on the home screen of the watch.

 - **Personal details:** The ability to display and configure the user details:

 - **Profile:** Configure the personal details of the account administrator.


 - **Device list:** The ability to display and add/edit associated devices. By clicking on a device name, you can change its details. The **Switch** option allows you to switch the active device, i.e. the one being currently tracked. To remove a watch from the list, select **Edit>Delete**.

 - **Change password:** Change the password used in the app.

 
 - **Log out:** Log out of the app.

 - **Change map view:** The ability to change the map style.


 - **Phone location:** Indicates the current location of the phone on which the app is launched.


 - **Device location:** Indicates on the map the location of all associated devices in the app.


 - **Switch:** Quickly switch between associated devices.




 - **Settings:** The ability to display and configure the functions:


 - **SOS numbers:** Configure SOS numbers (**max. 3**). Pressing and holding the SOS button on the watch will call the first number. If the call is unsuccessful, the watch will automatically dial the second and then the third number. If the SOS call is answered by the voicemail active on one of the SOS numbers, it will not be redirected to the next number. The SOS function is active only when the watch is within range of the network, has an internet connection, and the account is sufficiently topped up.

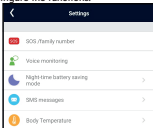



 - **Voice monitoring:** Remote voice monitoring. Enter a phone number to activate the function. The watch will automatically call back the phone number entered within 30 seconds. The watch screen remains unchanged - it is completely discreet.


 When configuring the functions **SOS Numbers** -  and **Voice monitor** - , enter the numbers without the country code. Using the "+" symbol may prevent calls from being made.


 - **Night-time battery saving mode:** Ability to activate/deactivate the battery saving mode, which limits the network functions of the watch between 22:00 and 6:00 (**extends the operating time of the watch**).


 - **SMS messages:** The ability to read text messages sent to the number on the watch.


 - **Body temperature:** View the history of measurements, start measurements directly from the app, and adjust settings related to measurements, including enabling SMS notifications.


-  - **Modes of operation:** Select the refresh frequency of the watch location:
 - * **Tracking mode** – refreshes every 1 minute (reduces the running time of the watch),
 - * **Normal mode** – refreshes every 10 minutes,
 - * **Battery saving mode** – refreshes every 1 hour,
 - * **Sleep mode** – manual positioning.


-  - **SMS notifications:** On/Off and configuration of SMS notifications to the specified phone number.

-  - **Bump Friends** The Ability to add a card for your child and check out active friends.

-  - **App Store:** The ability to control additional applications installed on the watch.

-  - **Family members:** List of administrators who can manage the watch.


-  - **Phone book:** The ability to add contacts, which will be displayed in the phone book of the watch.

-  - **Wi-Fi settings:** Configure the Wi-Fi network that the watch connects to automatically, without entering a password.

-  - **Time zone:** Configure the time zone of the watch.

-  - **Language:** The option to change the language of the smartwatch.

-  - **Management:**
 - * **Numeric keypad:** Enable/disable the numeric keypad function on the watch. Turning on this function allows the watch user to dial

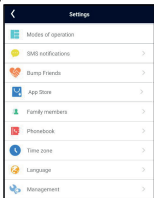

and make a call to any number (including those not entered in the phone book). If you do not want the watch user to be able to contact numbers not entered in the phone book, turn this function off.

- * **GPS positioning:** Option to enable/disable the watch's positioning function via GPS.



- **Power plan:** Schedule your watch to turn on or off.



- **LBS:** The ability to turn on/off the tracking function of the watch based on the nearest mobile network transmitter, in the event that the watch loses GPS signal.



- **Watch finder:** The ability to search for your watch - this function triggers an audible alarm.



- **Turn off watch:** Turn off the watch remotely.




- **Restart watch:** Restart the smartwatch.



- **Restore factory settings:** The ability to reset the watch to factory settings.



- **Delete account:** Send a request to delete the account from the app server. The account should be deleted within one hour.

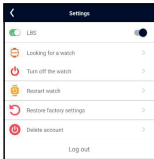






Log out: Log out of the app.



Depending on the device model, the functions of the Garrett Tracker app described above may vary. In the event of any problems, we encourage you to contact our Technical Support Department: contact@garett.eu

MAIN MENU

-  - **Telephone:** Numeric keypad function. It allows you to **dial any number (even from outside the phone book)** using the keyboard and **make a call - the button** . It is possible to disable the **Telephone function via the Garrett Tracker application** in the tab: **Management>Numeric keyboard.**
-  - **Contacts:** Phone book function. Displaying contacts previously saved via the **Garrett Tracker** application. **Select a number from the list** or click  **to enter the number and start the call.** The conversation is **interrupted** by pressing the **red handset icon** or the **function button**. We **answer incoming calls using the green handset icon** and similarly **reject the red one** or with the function button.
-  - **Settings:**
 - * **Mobile network:** Configure network settings (VoLTE, APN, data roaming),
 - * **WLAN:** WiFi network settings,
 - * **Bluetooth:** Bluetooth settings (ability to pair Bluetooth headphones),
 - * **Personal hotspot:** Function that shares the Internet with other devices via Wi-Fi,
 - * **Battery:** Battery management
 - * **Personalization:** Allows you to change the appearance and behavior of the interface, e.g., theme, background, dynamic effects, menu appearance, or touch effects.
 - * **Notifications:** Allows you to enable or disable alerts from various sources.
 - * **Brightness settings:** Adjust the display brightness, change the font size, and enable eye protection mode.
 - * **Volume settings:** Adjust the watch volume (multimedia, alarm clock, ringtone), manage vibrations.
 - * **Profiles:** Ability to change the watch's operating profile.
 - * **Screen lock:** Allows you to set security - PIN or unlock by face recognition.
 - * **Application:** Allows you to manage applications on the device.
 - * **SOS:** Allows you to add an emergency number.
 - * **Memory:** Manage device memory.

- * **More:** Access settings such as date, time, system keyboard language, auto-reply, SMS synchronization, acoustic drainage,
- * **About the watch:** Basic information about the watch,
- * **Device update:** Allows you to check the current software and update the watch,
- * **System operation:** Allows you to turn off or restart the watch,



- **Chat:** Voice/text messaging feature. Displays **recent voice memos and recent text messages** sent from the **Garett Tracker app to your watch**. It is possible to **send a voice message from the watch**. To send a voice memo, **press and hold** while dictating a message (**max. 15 seconds**). **Release the button to send** the message to the watch administrator. It will appear in the **Garett Tracker app** under the **Chat** tab. Using the **+** button, the user can send:

- * emoticon,
- * photo taken with camera,
- * photo selected from the watch gallery.

Clicking will start a video call.



- **Sport:** Once you have selected sport mode, **press "Start workout."** Swiping from the left edge of the screen **stops the activity and displays a menu where you can resume** - , **end** - , **change the volume** - , **or enable touch lock** - . When touch lock is enabled, a white padlock appears at the top of the screen to indicate that touch is locked, and a gray padlock indicates that touch is active. You can unlock the touch screen by tapping the padlock icon.












- **Sports records:** The app saves your workouts. When you select a specific workout, you can see its details and additional information.















- **Timer:** The timer function allows you to set a countdown and notifies you when it expires.








- **Walkie-Talkie:** The app allows you to create or join chat groups using a special group password. To use the walkie-talkie function, you need a second watch equipped with the same app


-  - **Screen recording:** The app allows you to record the image displayed on the device's screen. Recording starts when you press the **"Start recording" button**. To stop recording, use the **function button on the main screen** or **press the red square** at the top of the screen.
-  - **Video call:** Video calls function. Possibility of making video calls between the administrator and the associated watch. **Group chat** also available. Select a person and **confirm the call** to start. You can terminate the call by pressing the **red phone icon** or the **function button**. Incoming calls are answered with the **green phone icon** and similarly rejected with the **red** or the **function key**.
Due to the large amount of data transferred during a video call, a high-speed internet connection is required, so an LTE or WiFi connection is recommended. For locations with poor mobile network coverage, such as out-of-town areas, shopping malls or underground car parks, it may not be possible to make a video call or it will be of poor quality with interruptions in video transmission.
-  - **History:** Call history function. It is possible to view the exact date and time of **recent voice calls**.
-  - **Camera:** Camera function. Take photos using the built-in camera. To **take a photo, press the middle button at the bottom of the screen**. Photos will be saved in the device's gallery. To **switch to video recording mode, tap the icon () in the bottom-right corner, then press the middle icon to start recording**. To **preview** a photo or video, **press the left icon at the bottom of the screen**. From there, you can: **share the photo/video, delete it or view additional information**.
-  - **SMS:** SMS function. Allows you to send/receive SMS messages. Tap , to start creating a **new message**. Enter your **phone number** or **click ** and select a **previously saved contact** from the **Garrett Tracker application in the first field**. In the **second field**, enter the **content of the message** you want to forward. Press the return **touch button** to exit the keyboard view when finished. **Click **, to **send your message**. Messages sent/received will be available in the list view as soon as you select the SMS function.


-  - **Magic Camera:** Camera function with the possibility of filters' application.
-  - **QR Code:** Displays the **REG CODE** and **QR code** to download the **Garett Tracker app**.
-  - **Gallery:** The watch's gallery function. Possibility of viewing, deleting and sending photos. To delete, press **[X]**. To send, press **[Left Arrow]** and **hold the photo**, then give permission for the photo to be transferred. It will appear in the **Garett Tracker app** under the **Remote Camera** tab.
-  - **App Store:** Ability to install additional features on the watch, which, once installed, become available from the AppStore feature selection menu.
 - * **WhatsApp is installed on the watch by default. It requires logging in or registering a new account with the phone number of the active SIM card.**
-  - **Steps:** Pedometer function. Displays the number of steps you have taken. Option to **enable/disable** this function in the **Garett Tracker app** under **Activity>Pedometer>Measurement**.
-  - **Timetable:** Ability to view a pre-configured timetable in the **Garett Tracker app**.
-  - **Alarms:** Possibility of viewing a pre-configured alarm clock in the **Garett Tracker app**.
-  - **Stopwatch:** Stopwatch function.
-  - **Calculator:** Simple math calculator function.
-  - **Calendar:** Calendar function.
-  - **WhatsApp:** WhatsApp messenger function. It requires logging in or registering a new account with the phone number of the active SIM card.


- 
FaceUnlock:
 - * **Screen lock:** Possibility of adding a **PIN code** as a screen lock. Enter your **PIN, repeat it, and then confirm to add a new lock.** The entered data will be required each time you try to unlock your watch. **This function protects against unauthorised access to the smartwatch - Level I.**
 - * **FaceUnlock: Face unlock function + PIN.** Enter the **PIN to activate the function, repeat and confirm.** Then **scan your face** in the add face menu (**it appears automatically after entering and confirming your PIN**). Hold the watch in **front of your face and move it** according to the messages displayed on the smartwatch until the **scanning is complete (100%)**. The image of the scanned face will be used to unlock the screen. **This function protects against unauthorised access to the smartwatch - Level II.**





- 
Music: Music player function. Control the music player using the following options: **▶ - Start/Stop, ▶ - Next, ◀ - Back. Press  to display a list of all songs.** Using , you can adjust the volume of the songs being played.
 The icon located in the **lower right corner** allows you to perform the following actions:
 - * **Repeat:** Loop playback of one or more songs.
 - * **Random:** Play all songs randomly on the smartwatch.


- 
Video player: The watch's video gallery function. Browse, delete, and send videos. Select a video to **start playback.** Click  to **send a video via Bluetooth.** To **delete a video, press and hold** the desired recording, then confirm the deletion.


- 
Heart rate: Heart rate measurement function.

- 
Blood pressure: Blood pressure measurement function.

- 
Blood oxygen level: Blood oxygen saturation measurement function.

- 
Sound recorder: Voice recorder function. **Press  to start recording, then , to pause or  to stop.**

-  - **Thermometer:** Thermometer function. Allows you to take temperature measurements, change the unit and view recent measurements. Two modes are available:
 - * **Wrist:** Click **Start** to start a quick measurement of your current body temperature. When the **measurement is complete**, you will hear a **beep**; the result will be displayed on the watch screen (**also available under the History button**) and saved in the **Garett Tracker** app under **Settings>Body Temperature**.
 - * **Real-time measurement: Automatic continuous** measurement function. The temperature reading will change constantly depending on the **temperature of the measured objects**. Click **Reset** to **reset the results** or **Exit** to **exit**. The **measurement results are not stored in the watch memory or transferred to the Garett Tracker application**.

-  - **Garett AI:** Includes 19 interactive AI educational applications. To add AI applications, follow these instructions:
Garett AI -> Settings -> Edit AI agent -> Add -> Click on the selected application.
After adding the selected AI application, the system returns to the Add button. To add another AI chat, click the Add button again and select the next application. Each chat is added separately.

 **Depending on the software version of your device, the smartwatch functions described above may vary. In the event of any problems, don't hesitate to contact our Technical Support Department: contact@garett.eu**

TROUBLESHOOTING

1. The device does not turn on:

- * Connect the device to a wall charger for **approx. 2 hours**,
- * Check whether the charging cable and charger **are working**,
- * Check whether the device is **properly connected**.


2. No GSM signal (icon –):

- * Check whether the **SIM card format is correct**,
- * Check whether the SIM card is **inserted properly in the slot** (as specified at the beginning of the manual),
- * Check whether the **SIM card meets all the requirements** (described at the beginning of the manual).
- * **Turn the device off and on again**,
- * Check whether the watch works **with another SIM card**.

3. No internet connection (no icon – or the following message in the Garrett Tracker app: "The device is offline"):

- * Check whether the **SIM card meets all the requirements** (described at the beginning of the manual).
- * If the SIM card meets all the requirements and the error still occurs, please contact our Technical Support Department: contact@garett.eu


4. Inaccurate GPS location:

- * Check whether the watch has a **GPS signal** (icon – )
- * The watch must be in an open area (if the watch loses GPS signal, e.g. because it is inside a building, the location is determined based on the nearest mobile network transmitter).

5. Calling the watch is impossible – busy signal or user unavailable:

- * Check whether the number you are calling from is **topped up**,
- * Check that neither your number nor the number on the watch is **blocked or restricted**,
- * Check whether the **Whitelist option is turned on** (if your number is not saved in the phone book and the Whitelist is on, the watch will reject the call).

6. Calling from the watch is impossible:

- * Check whether the watch has a **GSM signal** (icon – ) ,
- * Check whether the SIM card **meets all the requirements** (described at the beginning of the manual).
- * Check that the **numeric keypad function is turned on** or **that there are contacts saved in the phone book of the watch.**

7. During calls, you cannot hear the other person in the smartwatch speaker:

- * Check that the speaker on the watch **has not been muted** (you can **adjust the sound volume** in the watch settings).

8. Short battery life:

- * Check that **the watch charging time was not too short** (the recommended charging time is **approx. 2 hours**),
- * Check the current operating mode on the device (**Normal mode** or **Battery saving mode** are the recommended options).



In the event of any problems with using the device, we encourage you to visit the **Technical Support** section on our website (scan the QR code/use the link) or contact the **Technical Support Department: contact@garett.eu**



<https://garett.eu/technical-support/>

TECHNICAL SPECIFICATIONS



GSM module:
2G / 3G / 4G LTE



Processor:
ASR8601



Battery:
800 mAh



Weight:
approx. 48 g



Display:
AMOLED 1,78"



Dimensions:
49 x 41,4 x 13 mm



Interchangeable strap



Water resistance:
IP68



Dedicated app:
Garrett Tracker



Warranty:
24 months

More information about this device is available at www.garett.eu. Visit our website to see more products and accessories.

WARRANTY/CLAIMS

The product is covered by a 24-month manufacturer's warranty. The warranty does not cover: defects and damage caused by the user or as a result of improper use (misuse), mechanical damage and damage resulting from using accessories and/or consumables other than those provided with the device.

Contact details are available on the website:

www.garett.eu

Manufacturer/person responsible in the EU:

GARETT sp. z o.o.

Sandomierska 209 Street

25 - 330 Kielce, Poland

www.garett.eu

contact@garett.eu



Proper disposal of the product (waste electric and electronic equipment)

As indicated by the marking on the product or in the related content, the device should not be disposed of with other household waste after the end of its service life. To avoid harm to the environment and human health as a result of uncontrolled waste disposal, please separate the product from other types of waste and recycle responsibly in order to promote reuse of material resources as a regular practice. For information about where and how to recycle this product in a way that is safe for the environment, household users should contact the retail outlet at which they purchased the product, or local authorities. Business users should contact their supplier and check the terms of the purchase agreement. Do not dispose of the product with other commercial waste.





GARETT SPÓŁKA Z O. O. hereby declares that the product is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following web address: www.garett.eu

Frequency range	Maximum emitted power
GSM 900/1800 MHz	33,51/30,44 dBm EIRP
UMTS 900/2100 MHz	23,77/23,87 dBm EIRP
LTE 800/900/1800/2100/2600 MHz	23,49/23,10/23,10/23,44/23,27 dBm EIRP
Wi-Fi 2412-2472 MHz	16 dBm EIRP
Bluetooth 2402-2480 MHz	≤ 20 dBm EIRP



GARETT