



AIRLITE™ FIT

QUICK-START GUIDE

IMPORTANT READ BEFORE USING

CERTIFICATION MODEL:
500-226

PACKAGE CONTENTS

- Airlite Fit Wired Gaming Headset
- Quick-Start Guide


SETUP

1. Initial Setup

- Turn on your Nintendo Switch™ console.
- Plug the 3.5mm jack into your Nintendo Switch™ console.
- You should now be connected.




- Turn on your Nintendo Switch™ console.
- Connect your controller to the Nintendo Switch dock.
- Plug the 3.5mm jack into your Nintendo Switch™ controller.
- You should now be connected.

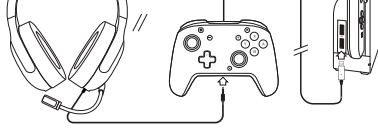


2. Mic Mute

- To mute your mic, flip mic boom up until it stops, and the turret is pointing up.
- To unmute your mic, flip the mic down until it stops, and the turret is perpendicular to the headset.

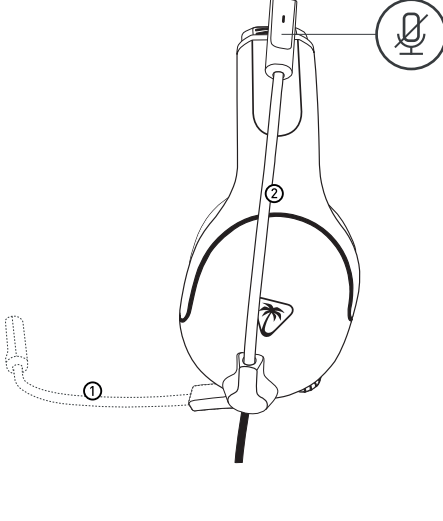

3. Volume Adjustment

- To adjust the volume on the headset, locate the volume wheel on the back of the left earcup.
 - To increase the volume, scroll the wheel up. To decrease the volume, scroll the wheel down.
- If the volume still needs to be adjusted use the Switch Console physical volume button or adjust the volume in the Switch settings.
- To disable the Lower Max Headphone Volume option (Switch 2 only) Open Setting, scroll down to Audio, turn off "Lower Max Headphone Volume"

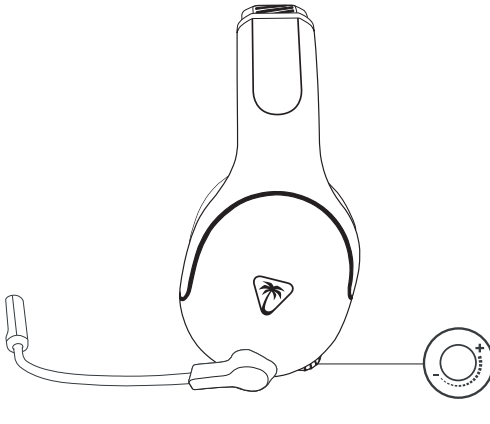

4. Adjust Mic Settings - Switch 2 Console

You can adjust the mic's settings on the Nintendo Switch™ by following the below steps:

- Make sure you have your mic turned on (flipped down), and headset plugged into your Switch console or controller, then:
 - Open the Settings menu
 - Scroll down and select Audio
 - Scroll down to Microphone Input Volume
 - Slide the bar to the desired setting

*For Switch - OLED users, please refer to game settings for games that support native chat.

5. Troubleshooting - Chat Not Working

- Make sure the mic tip is aligned with the user's mouth.




6. Troubleshooting - Mic Not Muting

- Make sure the mic turret is rotated up, not just pointing/bending up.
- Note: Bending the mic boom will not mute the mic and could cause the boom to break over time.

7. Troubleshooting - No Sound

- Make sure the volume wheel is not at the lowest setting on the headset. If it is, adjust the desired level.
- Make sure the console's volume is at the desired level. For adjusting the volume please see section 3 of this guide.

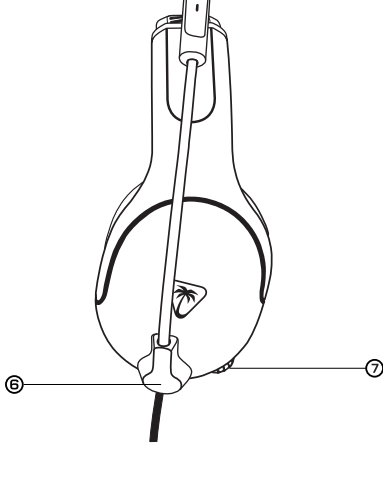

TURTLE BEACH™

Any questions?

www.turtlebeach.com/support

Please register your product to receive important updates.

www.turtlebeach.com/productregistration

For warranty, visit:

www.turtlebeach.com/warranty