

# **MISURA MONITOR 27" FLAT**

### USER MANUAL ENGLISH



Model: P24QW27DQI01B – 75 Hz













Low Blue Eyes Technology

QHD resolution 2560x1440 Ultra Wide Viewing Angle Power Delivery Technology

### SAFETY INFORMATION

- **Read these instructions** All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** The safety and operating instructions should be retained for future reference.
- **Heed all warnings** All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instrucions All operating and usage instructions should be followed.
- Do not use this equipment near water, or in humid environments The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or trapped, particularly at the plug and at the point where it exits from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart or stand is used, use caution when moving it to avoid any injuries or damage from it tipping over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Please keep the unit in a well-ventilated environment.
- The monitor should only be connected to a mains power supply as rated on the back of the equipment.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.

- Do not place heavy items on the cable as this may cause damage.
- When removing from a socket hold by the plug and not the wires.
- Disconnect the power immediately and seek professional help if the plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.
- Do not block ventilation slots on the back cover. The monitor can be placed in a cabinet but ensure at least 5 cm (2") clearance all around.
   Do not tap or shake the screen, this may damage Internal components.
- Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.
- Warning: The wall plug socket is used as a disconnection device and should remain readily accessible.
- Warning: The batteries shall not be exposed to excessive heat such as direct sunlight or fire.



AT FULL VOLUME, PROLONGED LISTENING MAY DAMAGE THE USERS HEARING.



warn of dangerous voltage inside the product.

#### C A U T I O N RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: To reduce the risk of electric shock, DO NOT remove the cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This warning sign is to alert you of important instructions accompanying the product.

## ACCESSORIES

- 1 | 27 inch Monitor
- 2 | Stand
- 3 | USB-C Cable

- 4 | HDMI Cable
- 5 | Power Adaptor and Power Cable
- 6 | User manual

## MONITOR INPUTS



1 | HDMI 1.4 & 2.0 2 | DP 1.2 **3 |** USB-C with PD 45W function **4 |** AUDIO OUT

## MONITOR CONTROL BUTTONS



1	Α	Select signal source or Exit OSD	
2	Μ	Open the Main OSD Menu and Select submenu	
3	▼	Go Down on the Main OSD Menu Decrease the value of a selecte d item	
4		Go Up on the Main OSD Menu Increase the value of a selected item	
5	ڻ	Turn the monitor on or Off	

### INITIAL SETUP

#### Connect the monitor to a power outlet.

- 1. Press the POWER button on the monitor or to turn it on (The indicator will be blue)
- Connect the relevant cable to the corresponding input on the monitor. The source will be automatically detected.
- To change between inputs, press the EXIT button to enter the source menu. Use the "◄" and "▶" buttons to choose the input source between TYPE-C, DP and HDMI.



### MENU OPTIONS

The menu for the monitor can be accessed by pressing the MENU button on the control panel. This menu is separated into the following sub menus: Brightness, Image, Colour Temperature, OSD Settings, Reset, and Miscellaneous options, details of each menu can be found in the following section.

Please Note: Some settings may not be adjustable in which case they will be grayed out. This could be due to the input source or other options chosen within the menus.

#### BACKLIGHT

BACKLIGHT					
*	BRIGHTNESS				] 80
	CONTRAST				] 50
<u>×</u>	ECO	•	STANDARD	•	
♦ <mark>0SD</mark> ♦	DCR	•	OFF	•	
3	HDR MODE	•	OFF	•	
*					

**BRIGHTNESS:** Allows the adjustment of the image brightness, according to ambient light in the room. Value "0–100".

**CONTRAST:** Allows the adjustment of the image brightness, according to ambient light in the room. Value "0–100".

**ECO:** Allows selection of image settings between the following: STANDARD, TEXT, MOVIE, GAME.

**DCR:** Allows the dynamic contrast of the picture to be turned ON and OFF. **HDR MODE:** Allows HDR Mode to be turned ON and OFF.

#### **IMAGE**



Allows selection of video format of the between "WIDE, 4:3".

### COLOR

COLOR				
*	COLOR TEMP.	•	WARM	•
	RED			50
				50
(OSD)	BLUE			50
G	LOW BLUE LIGHT			50
<b>*</b>				

**COLOR TEMP.:** Allows adjustment of the colour settings between the following options: Normal – Warm – Cool – User – 7500 – 5800 – SRGB. **RED:** Allows adjustment of the red element of the image.

**GREEN:** Allows adjustment of the green element of the image.

BLUE: Allows adjustment of the blue element of the image.

**LOW BLUE LIGHT:** Allows adjustment of the low blue light of the OSD, value "0–100".

### OSD SETTINGS



LANGUAGE: Allows selection of desired language: English, French, Turkish, Italian, Spanish, Portuguese, Chinese, Dutch, Japanese, German, Polish, and Korean.
OSD H. POS: Allows adjustment of the horizontal position of the OSD.
OSD V. POS: Allows adjustment of the vertical position of the OSD.
OSD TIMER: Allows adjustment of the duration of the OSD, value "5–100".
TRANSPARENCY: Allows adjustment of the transparency of the OSD, value "0–100".

#### RESET

RESET					
<b>*</b>	IMAGE AUTO ADJUST				
	COLPOR AUTO ADJUST				
<u></u>	RESET				
♦ OSD ♦	FLICKER FREE	•	OFF	•	
**					

### IMAGE AUTO ADJUST COLPOR AUTO ADJUST

**RESET:** Returns the monitor to its factory default settings.

FLICKER FREE: Allows the flicker free of the picture to be turned ON and OFF.

### **OTHER**

MISC					
	SIGNAL SOURCE MUTEO VOLUME	•	HDMI FF	• •	50
**	2560	X1440 7	5Hz		

**SOURCE:** Allows user to choose the signal source of the display "HDMI, DP and USB-C".

MUTE: Allows Mute to be turned ON and OFF.

VOLUME: Allows adjustment of the volume of the monitor from "0–100".

## **TECHNICAL SPECIFICATION**

Model	P24QW27DQ101B-75 Hz		
Screen Size	27"		
Aspect Ratio	16:9		
Backlight	LED		
Brightness	250 cd/m <sup>2</sup>		
Panel Type	IPS		
Resolution	2560 × 1440		
Refresh Rate	75 Hz		
Response Time	5ms (GTG)		
Viewing Angle	178°/178° (CR>10)		
Contrast Ratio	1000:1		
Colours	16.7 Million Colors (8bit)		
Signal Input	HDMI + DP + USB-C + Audio Out		
Power Delivery	45 W		
Speakers	2×2W		
Power Cable	Yes		
HDMI Cable	Yes		
USB-C Cable	Yes		
HAS	Yes		
Play&Plug	Yes		
FreeSync	Yes		
Flicker Free	Yes		
Low Blue Light Mode	Yes		
Power Consumption	Typical 32 W		
Power Type	AC 100–240 V 50/60 Hz		

"The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the Home transmission trademarks of HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Important Note: The specification may be changed without prior notice.



Manuál v Češtině otevřete zde Manuál vo Slovenčine otvoríte tu Open the English manual from here Das Handbuch in Deutsch können Sie öffnen hier A magyar nyelvű kézikönyvet itt tudja megnyitni Odprite priročnik v slovenščini tukaj Aprire il manuale in italiano qui Otwórz instrukcję w języku polskim tutaj



https://www.misura.shop/en/advisor/manuals-for-download-high-resolutionmonitor-27-75-hz-flat-p24qw27dqi01b