


HC B

Instruction manual

5100/5110

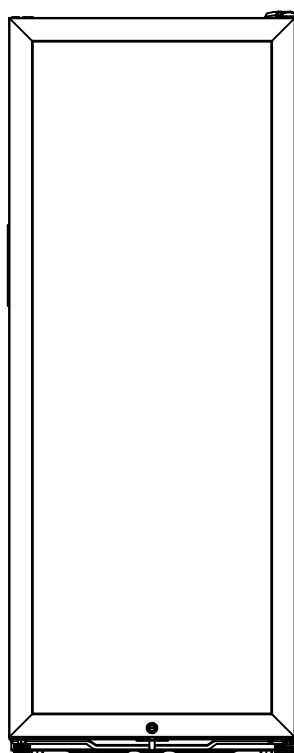

Please read all these instructions carefully before use and save them. We reserve the right to make technical and optical changes without prior notice.

The use of attachments which are not supplied with the appliance is not recommended. This could result in electrical shock or injury or permanent damage to the appliance.

Safety information

Before using your refrigerator, please read this owner's manual carefully.

A. Description:

This appliance is designed for cooling and displaying beverages. The appliance is not intended to cool hot beverages down. They must be cooled down to room temperature prior to placement in the appliance.

Do not use the appliance for other purposes. Any other use might lead to damage of the appliance, property or personal injury.

The manufacturer will accept no liability for damage or injuries resulting from improper use or non-compliance with this manual.

B. Safety warnings

Read this instruction manual carefully before using the appliance. Familiarise yourself with the operation, adjustments and functions of switches. Internalise and follow the safety and operation instructions in order to avoid possible risks and hazards.

Remove all packaging materials.

WARNING - DANGER OF SUFFOCATION! Packaging materials are not toys. Children should not play with the packaging materials, as they pose a risk of swallowing and suffocation!

WARNING! Switch the appliance off and disconnect it from the power supply before replacing attachments, cleaning work and when not in use.

WARNING - RISK OF ELECTRIC SHOCK! Protect the appliance and its electrical parts against moisture. Do not immerse the appliance and its electrical parts in water or other liquids to avoid electrical shock. Never hold the appliance under running water. Pay attention to the instructions for cleaning and care.

Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.

WARNING - RISK OF FIRE! This appliance contains flammable refrigerant

This appliance is classified as protection class I and must be connected to a protective ground.

Only use in dry indoor rooms.

1. This appliance must not be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.

2. Children shall not play with the appliance.

3. Cleaning and user maintenance shall not be made by children without supervision.

4. **CAUTION!** Risk of fire / flammable materials.


CAUTION! Risk of fire and explosion with flammable refrigerant R600a.

5. **WARNING!** The maximum loading of the shelves (25kg) must not be exceeded.

6. **WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
7. Make sure to follow the information pertaining to the handling, servicing and disposal of the appliance, especially with respect to the flammable refrigerant and flammable insulation blowing gas used in the appliance.
8. **WARNING:** Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
9. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
10. **WARNING:** Do not damage the refrigerant circuit.
11. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
12. **WARNING:** In order to reduce flammability hazards the installation of this appliance must only be carried out by a suitably qualified person.
13. Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
14. In the event of an accident or breakdown, immediately disconnect the appliance from the power supply.
15. **WARNING!** Misuse may lead to injury! Only use the appliance for its intended purpose and in accordance with this manual.
16. To guarantee the safe operation of the appliance, it shall undergo regular inspection and maintenance, including preventive maintenance measures, in accordance with this manual.
17. **WARNING!** Disconnect the appliance from its power source during cleaning or maintenance and when replacing parts. The removal of the plug has to be such that an operator can check from any of the points to which he has access that the plug remains removed. If this is not possible, due to the construction of the appliance or its installation, a disconnection with a locking system in the isolated position shall be provided.
18. Never use accessories other than those provided with the appliance or recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
19. Regarding the instructions for cleaning surfaces coming into contact with food, please refer to chapter "After use".
20. The appliance must be installed, operated, cleaned and maintained only by trained and skilled personnel familiar with these instructions.
21. Regularly have the electrical parts of the appliance checked by a qualified professional.
22. Danger of electric shock! Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
23. **WARNING!** Do not disassemble or modify the appliance in any way. Resulting fire or malfunctions may lead to injury.
24. Always turn the appliance off (0) before disconnecting the power plug.

25. Place the appliance on a wide, even, stable and dry surface able to support the combined weight of the appliance and its contents.
26. Do not pull the power plug out of the electrical outlet by the power cord.
27. The appliance is not intended to be operated by means of an external timer or separate GB remote-control system.
28. Connect the mains plug to an easily accessible socket, in order to quickly disconnect the appliance from the mains supply in an emergency.
29. The appliance is not intended to be used with a multi-socket unit or an extension cord. The power plug of the appliance should have its own independent and properly grounded socket. Using adapters may cause overheating or fire.
30. Do not store medical supplies in the appliance.
31. Do not place the appliance in direct sunlight or close to any heat sources, as this will hinder the cooling process.
32. The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposing of them, please consult your service agent or a similarly qualified person.
33. Do not place heavy objects or objects filled with water, e.g. vases, on the appliance.
34. Keep a minimum distance of 30cm between all sides of the appliance and walls or other objects to ensure proper air circulation. If the distance is too small, the cooling capacity may be impacted.
35. Do not use excessive force to open the glass door and do not apply pressure to the glass to prevent it from breaking.
36. After turning the appliance off, always wait at least 5 minutes before turning it on again. Otherwise, the compressor may be damaged.
37. The appliance is very heavy. It is recommended to slide the appliance for transport whenever possible. If the appliance must be lifted, please only do so with several people or have it lifted by qualified professionals with specialized equipment. The above applies to the packed as well as the unpacked appliance.
38. Never tilt the appliance more than 45° or turn the appliance on its side or upside down to avoid damaging the refrigerant circuit.
39. Important! Allow the appliance to stand upright for at least 2 hours before connecting it to a mains outlet for the first time, so that the refrigerant can settle. The same applies if the appliance is moved at a later date.
40. After connecting the appliance to a mains outlet for the first time, keep its door closed for at least 2 hours in cold environments, and 5 hours in warm environments, in order to allow the appliance to cool down to the set temperature.
41. To avoid explosion or fire, never use aerosol cans with a flammable propellant near the appliance or place flammable substances near it. Never use the appliance in explosive atmospheres.

Structure Illustration:

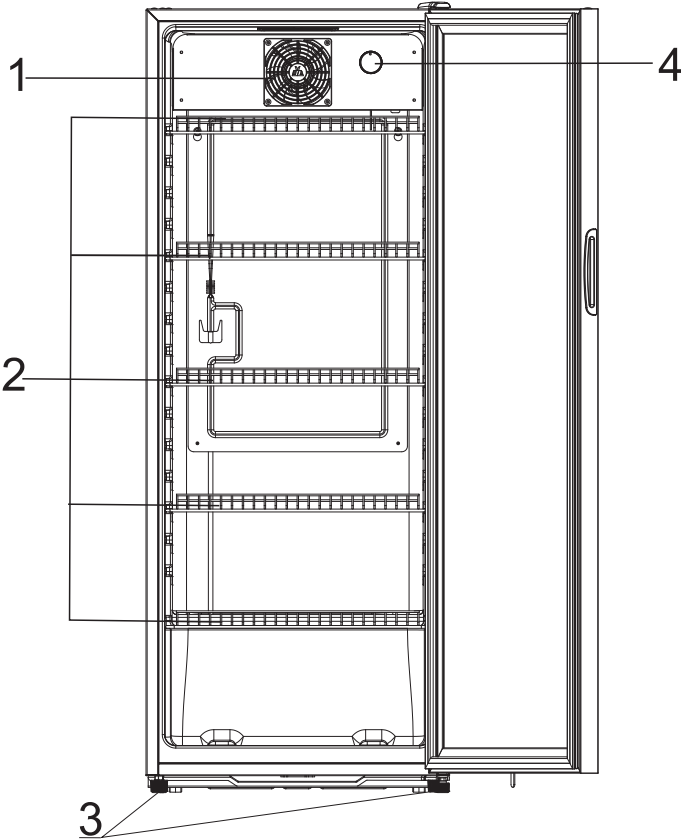

1.Fan

3.Adjustable foot

2.Shelf

4.Thermostat Knob

Note: The shelves can be disassembled and inserted according to different equipment to facilitate cleaning and storage of drinks.

Electrical safety

1. Ensure the rated voltage shown on the rating label corresponds with the voltage of the power supply.
2. Do not operate any appliance with a damaged power cord or plug, when the appliance malfunctions or has been damaged in any manner.
3. Protect the power cord against damages. Do not let it hang over sharp edges, do not squeeze or bend it. Do not place the appliance on the power cord. Keep the power cord away from hot surfaces and ensure that nobody can trip over it
4. Do not insert fingers or foreign objects in any opening of the appliance and do not obstruct the air vents.
5. Protect the appliance against heat. Do not place close to heat sources such as stoves or heating appliances.

C. After use

Cleaning:

- Switch off and unplug the appliance before cleaning or maintenance.
- Do not clean the appliance with steel wool, strong chemicals, alkali, abrasive or toxic agents, as they may damage the surface of the appliance and pose a health hazard.
- Use little or no water during cleaning. Make sure that no water enters the appliance while cleaning it.
- Wipe the outside and inside of the appliance with a soft damp cloth and a little mild detergent at least once a month. Also make sure to clean the door gaskets thoroughly. Dry with a soft dry cloth.
- If the shelves are very dirty, remove them from the appliance and clean them with warm water and mild detergent, using a soft sponge. Dry with a soft dry cloth.
- Regularly clean the ventilation openings with a soft brush or the crevice nozzle of a vacuum cleaner.
- The appliance may only be used again or stored after it is dried completely.

Defrosting:

- Defrost the appliance if ice has developed inside of it. Otherwise, the cooling capacity of the appliance may be impaired.
- To defrost the appliance, switch it off and unplug it. Remove all its contents.
- Wait until the developed ice melts. Wipe the melting water up completely with a soft dry cloth.

Storage:

- Before storing, remove all contents from the appliance, disconnect it from the supply and clean the appliance and its accessories thoroughly.
- Store the appliance in a dry, protected environment at room temperature and out of the reach of children.
- Keep the appliance's door open to avoid smell or mold.
- To protect the appliance from dust, cover it with a cloth that allows air circulation inside the appliance.

D. Troubleshooting

WARNING!

- In case of failures or malfunctions, always unplug the appliance immediately.
- Only perform the steps described in this instruction manual! All further inspection, maintenance and repair work must be performed by an authorized service center or a similarly qualified specialist.
- Should you require spare parts, always obtain them from an authorized seller. Do not use spare parts that are not recommended by the manufacturer!

Problem	Possible cause	Solution
<ul style="list-style-type: none"> • Appliance does not operate 	<ul style="list-style-type: none"> • Power plug not connected to electrical outlet. 	<ul style="list-style-type: none"> • Connect power plug tightly with a suitable electrical outlet
	<ul style="list-style-type: none"> • Supply cord is damaged. 	Have supply cord replaced by the manufacturer, its service agent or similarly qualified persons.
<ul style="list-style-type: none"> • Appliance does not achieve required temperature 	Appliance is located near heat sources	Move appliance well away from heat sources.
	Stored beverages or other objects prevent proper closing of door.	Reorder contents of cooling compartment or remove several items to allow door to close.
	Cooling compartment overloaded, filled with hot beverages or filled in a way that prevents proper air circulation	Remove several items, remove hot beverages or reorder contents of cooling compartment to allow air circulation.
	Door opened and closed too often	Keep door closed for a while.
<ul style="list-style-type: none"> • Appliance is very noisy 	Back of appliance is placed too near to the wall or to other objects	Keep a minimum distance of 30cm to wall or other objects
	Appliance not in a stable position.	Bring appliance into a stable position by adjusting its feet. Make sure that all feet are firmly on the ground.

Waste disposal/Environmental protection

Refrigerants must be evacuated and disposed of by a qualified specialist in accordance with federal and local regulations before the appliance is scrapped.

If the end use of the appliance is reached, especially when malfunctions occur, make the disused appliance unusable, by pulling out the power plug out of the mains socket and cut the power cord. Please remove the door before you dispose of the appliance.

The regulations for the disposal of electrical and electronic equipment (WEEE) claim that at the end of its product life this device has to be disposed securely, correctly and in accordance with these regulations in order to avoid possible damage to the environment.

We therefore ask you to support us with your contribution to the conservation of resources and environmental protection. When disposing of your product, use the recycling and disposal methods envisaged by the local regulations in your area.

HORECACENTRUM
Irislaan 75595 EH LeendeThe Netherlands

